



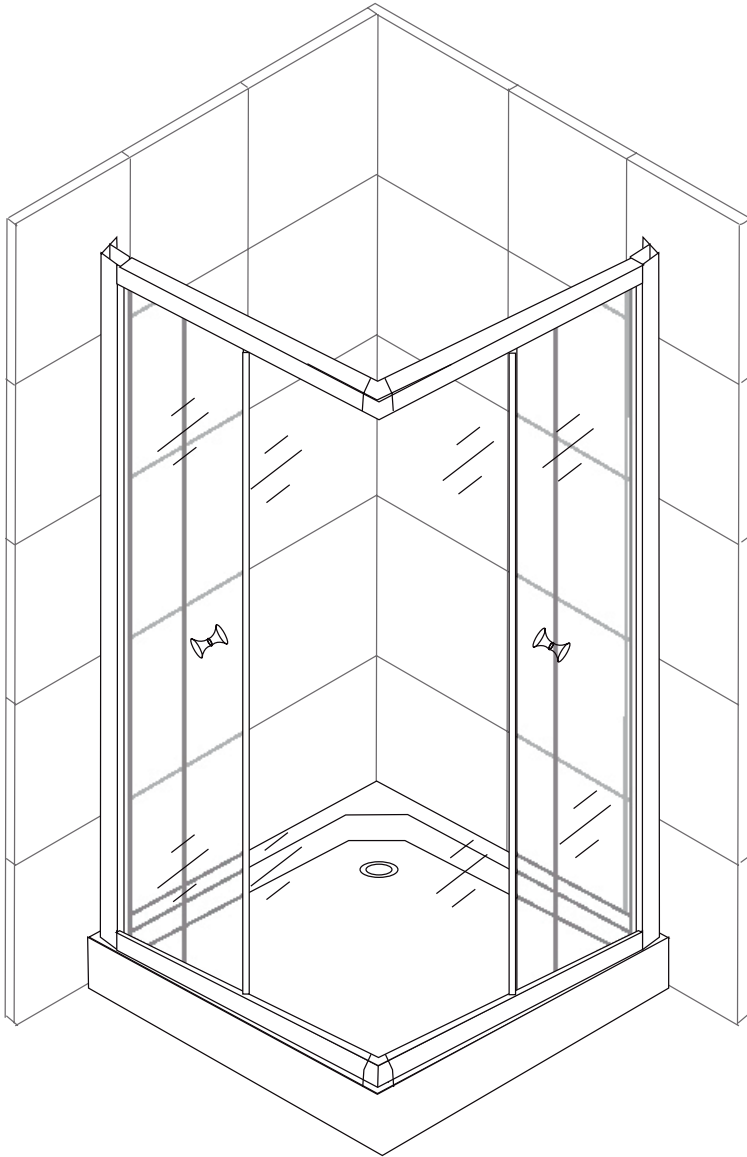


 



 
 


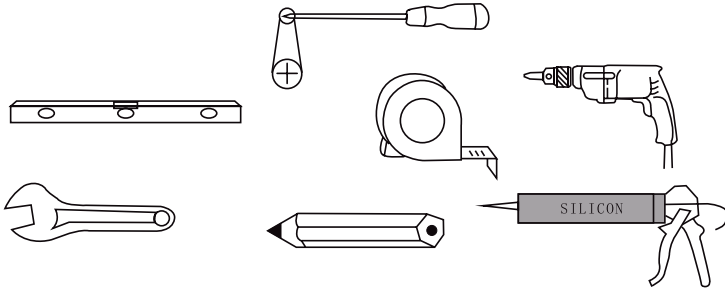







 


 
 




Montážní návod
Assembly instruction
BTQ700, BTQ800, BTQ900





<p>A1</p>  <p>M4x30 X6</p>	<p>A2</p>  <p>M4X8 X4</p>	<p>A3</p>  <p>X2</p>	<p>A4</p>  <p>M4X20 X8</p>
<p>A5</p>  <p>X2</p>	<p>B1</p>  <p>X2</p>	<p>B2</p>  <p>X4</p>	<p>B3</p>  <p>X4</p>
<p>C1</p>  <p>X4</p>	<p>C2</p>  <p>X4</p>	<p>C3</p>  <p>X8</p>	<p>C4</p>  <p>X8</p>
<p>B4</p>  <p>M4x10 X22</p>	<p>D1</p>  <p>2. 8MM X1</p>	<p>D2</p>  <p>M4x30 X6</p>	<p>D3</p>  <p>X2</p>
<p>D4</p>  <p>X2</p>	<p>D5</p>  <p>X2</p>	<p>D6</p>  <p>UP L X1</p>	<p>D7</p>  <p>X2</p>
<p>D8</p>  <p>X14</p>	<p>D9</p>  <p>X2</p>	<p>D10</p>  <p>X8</p>	<p>D11</p>  <p>UP R X1</p>
<p>D12</p>  <p>DOWN X1</p>	<p>D13</p>  <p>DOWN R X1</p>		

