


Popodusche ECO 3.0

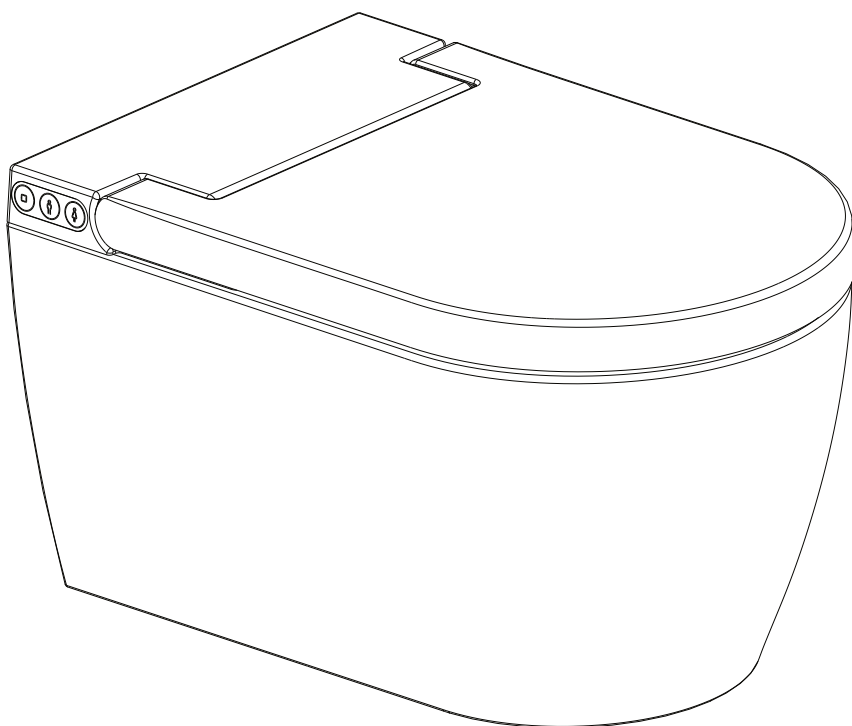

Operating Instructions

Safety precautions

Explanation of symbols



Refers to potentially dangerous situation that may cause serious injury or death .



Refersto potentially dangerous situation that may cause injury or property losses.



FORBID

Refersto forbidden to do .



Refers to abide by the rules .

MUST BE ABIDED



 
The supplier shall not be liable for any loss arising from the failure to comply with the following regulations

1. This equipment is “ I ” type electric appliance, must be completed connected to the grounding system
2. This equipment is electric appliance, please do not be installed at the place where can easily be splashed with water or high temperature. Please install exhaust fan or ventilation opening to make sure there is a good ventilation when using at Bathroom.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Please use the low flow and temperature .
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. The appliance will be permanently connected to the water pipe. Remove the water pipe assembly except for installation and maintenance.
7. The Portable Residual Current Device (PRCD) is optional. The PRCD must be reliably fixed.

Safety precautions



1. Do not insert or remove power plug with wet hands.
Otherwise there is a risk of electric shock.
2. Do not damage the power cord and plug.
Otherwise there is a risk of electric shock, short-circuit and fire.
3. Do not use the loose socket.
Otherwise there is a risk of electric shock and fire.
4. The power supply must be accorded with regulation.
Otherwise there is a risk of damage to the product and fire.
5. Do not disassemble, repair or reassemble the product.
Otherwise there is a risk of electric shock and fire.
6. Do not place a stove or a cigarette near the product.
Otherwise there is a risk of fire.
7. Make sure not to splash water, detergent or urine on the product and the power plug.
Otherwise there is a risk of electric shock, damage to the product and fire.
8. Do not turn the product upside-down.
Otherwise this might cause product damage.
9. Do not bend or distort the inlet hose.
Otherwise there is a risk of water leakage.
10. The new hose-set supplied with the appliance are to be used and the old hose-set should not be reused.







Technical Specification


MODEL		ECO 3.0
Wash	Rear Wash	•
	Female Wash	•
	Oscillating Spray	•
	Pulsating Spray	•
	Oscillating and Pulsating Spray	•
	Adjustable Water Temperature	OFF/5 Steps (Default 3rd)
	Adjustable Flow Rate	5 Steps (Default 3rd)
	Adjustable Spray Position	5 Steps (Default 3rd)
Hygiene	Nozzle Self Cleaning	•
	Nozzle Manually Cleaning	•
Heated Seat	Heated Seat	-
	Adjustable Seat Temperature	-
	Night Light	•
	Soft Closing Seat And Cover	•
	Quick Release Seat And Cover	•
	Remote Control	•
	Rimless Toilet	•
	Installation	Wall-hung
	Water Supply Connector	G 3/8
	Rated Voltage	AC220-240V , 50/60HZ
	Power	950W
	Length Of Power Cord	1.8m
	Water Supply Pressure	0.07 ~ 0.75MPa(0.7 ~ 7.5Bar)
	Water Supply Temperature	4 ~ 35℃
	Ambient Temperature	4 ~ 40℃
	Protection Degree	IPX4
Wash Device	Flow Rate	350 ~ 650mL/min
	Water Temperature	OFF/31 ~ 39℃
	Wash Cycle Time	3 Minutes
	Heating Mode	Instant water heating
	Maximum Heater Power	1600W
	Safety Device	Thermal Cutoff Fuses\Liquid Level Switch\Thermostat
	Backflow Prevention	Air Gap/EN1717
Heated Seat (optional)	Heated Power	-
	Seat Temperature	-
	Safety Device	-
Remote Control	Frequency Range	2460MHz
	Maximum RF Output Power	-10dBm
	Type of batteries	3V CR2032
	Number of batteries	Two pieces
	Other Safety Device	Residual Current Devices
	Net Weight	32Kg
	Dimension	575*370*338 mm

Technical upgrade will be edited into the new version instruction without additional notice. Please follow the real if it is different from the nominal in shape ,color and accessories.

ECO 3.0

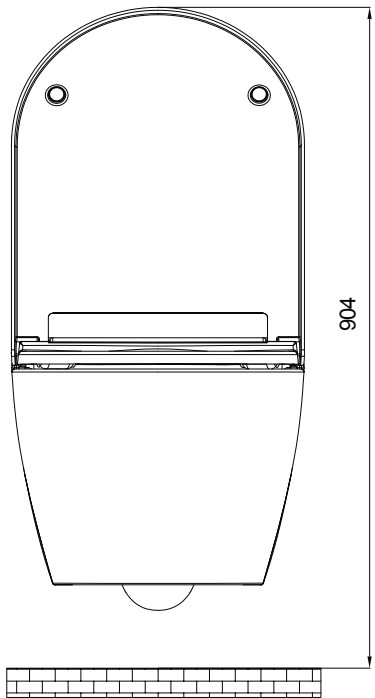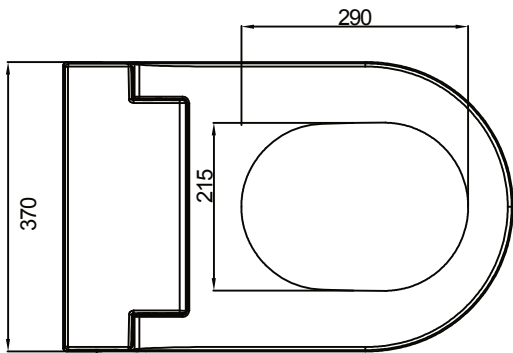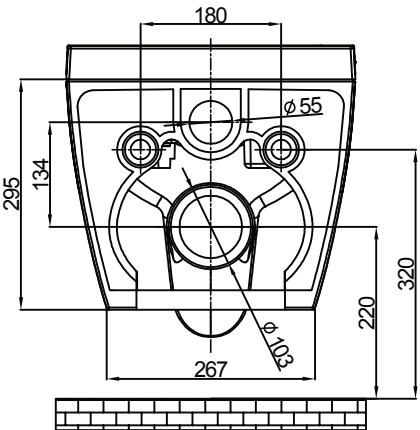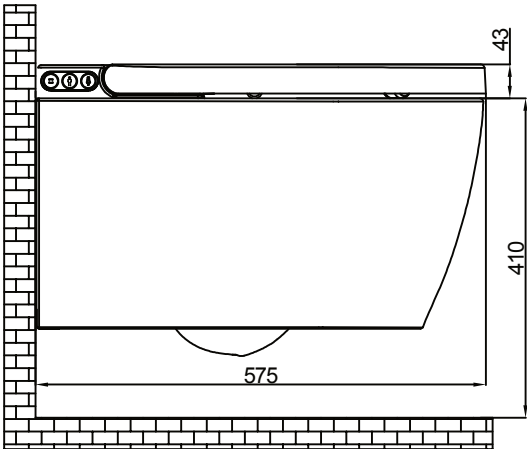


Overview

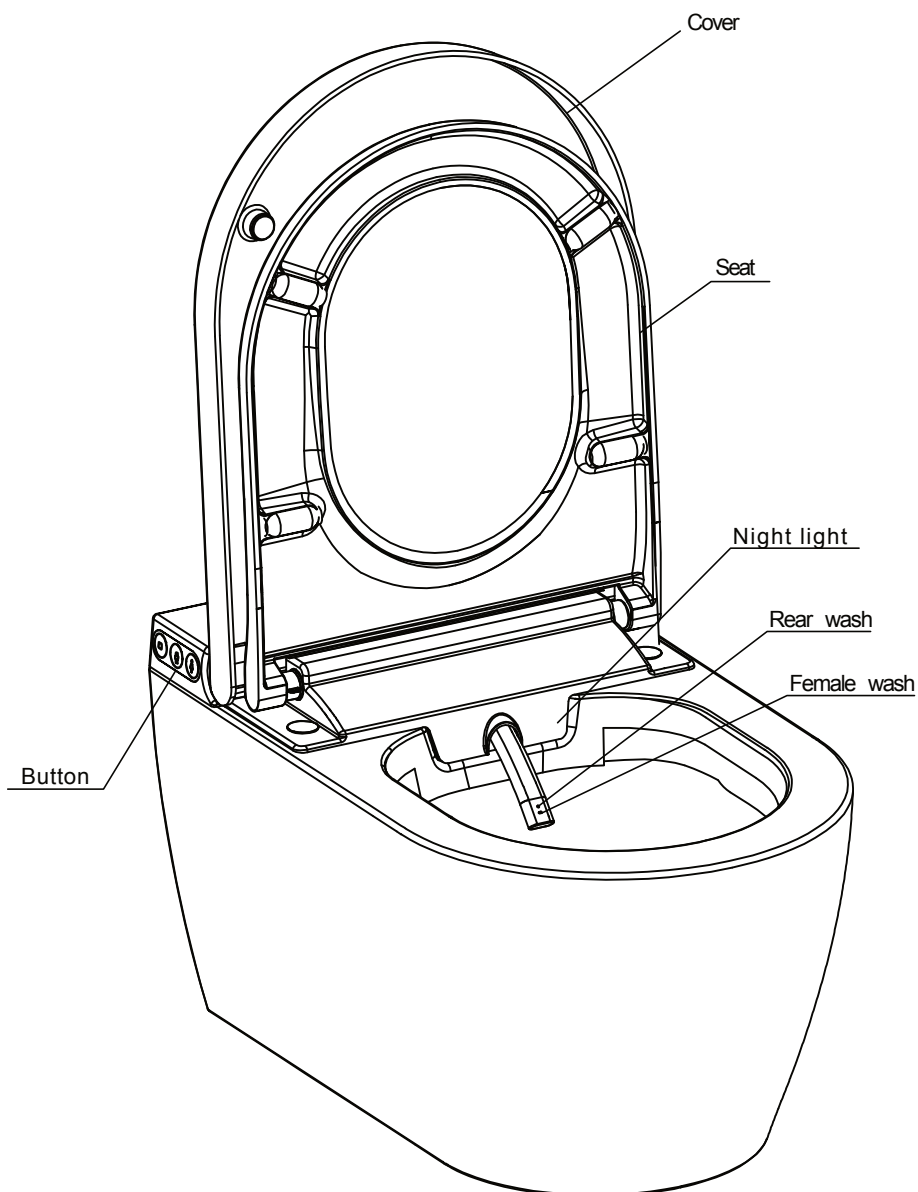

The pictures of this instruction is for reference only.
Please subject to the actual product .

Remote Control

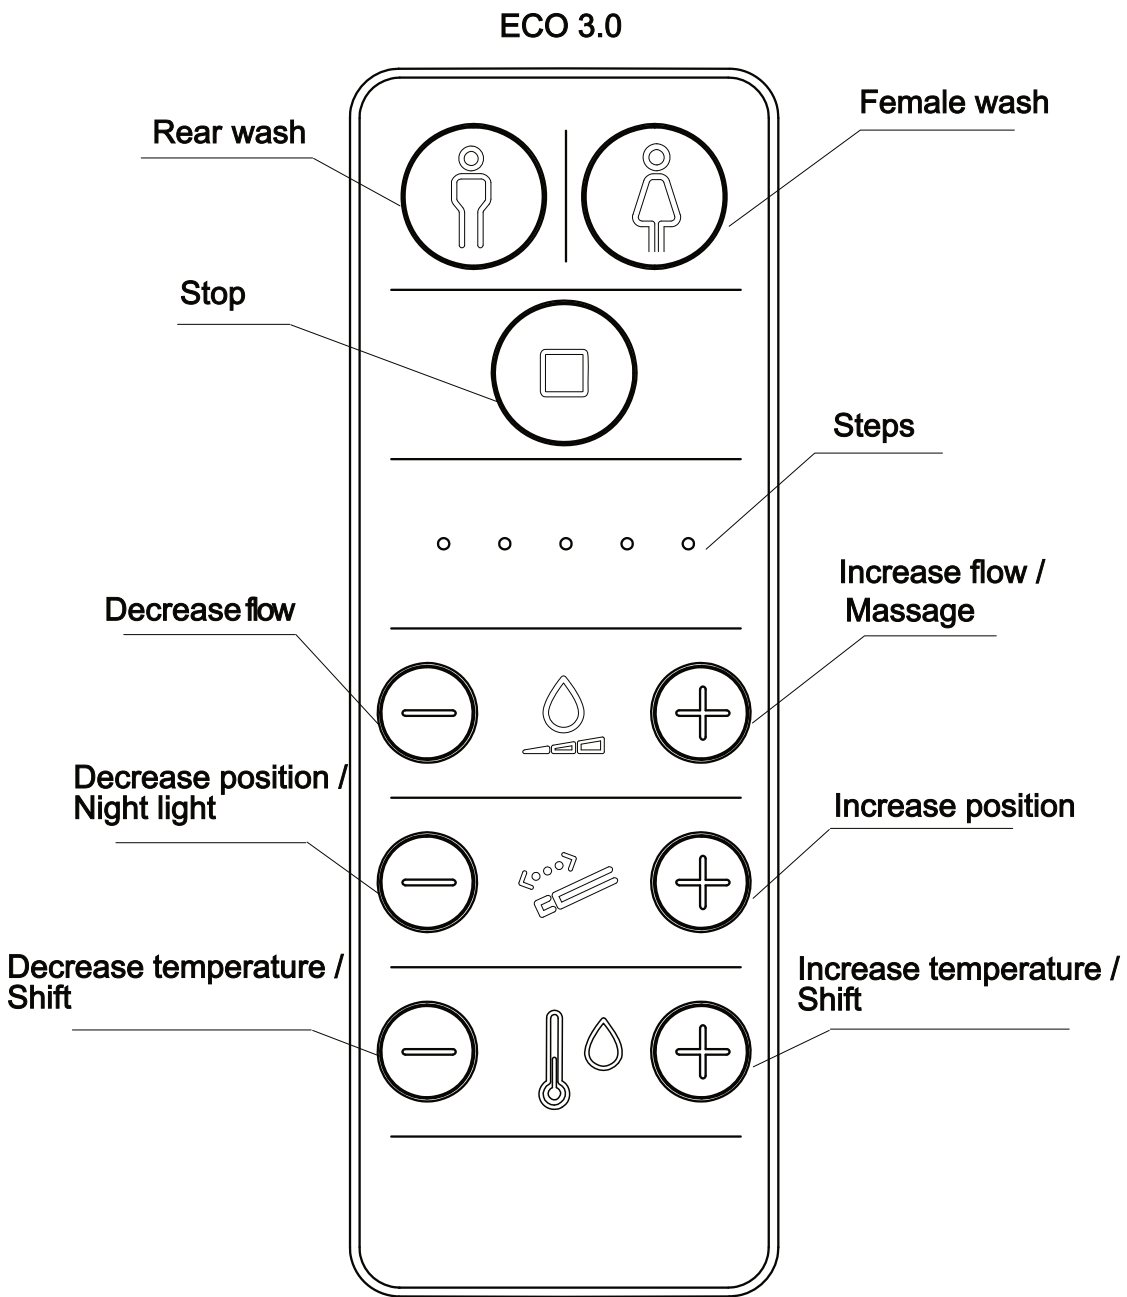


Before using, the remote control requires 2 batteries (type 3V CR2032)
(The software updates will not be notified. Please follow the real remote control.)

Rear wash /Female wash

- Be seated(Travel switch sensing seat)

Press the "Wash" button on the remote control then it start to wash.
It will stop after 3 minutes .


You can stop washing during this period by pressing the "Stop" button.

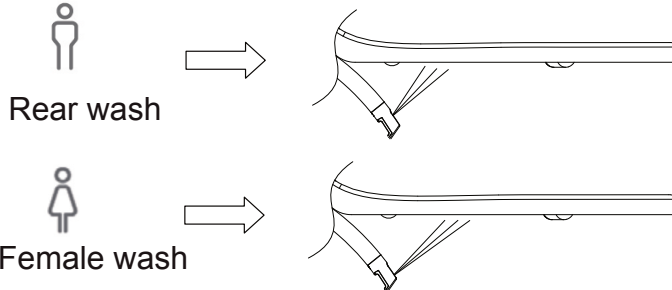

OR

You can operate by press the side button then it start to wash, it will stop after 3 minutes.

 Rear Female
wash wash



Note:

While Rear wash or Female wash , it will wash at the fixed position for about 15 seconds , and movable wash for about 15 seconds , then regain to the fixed position until to the end.

Massage Operation

- In the process of Rear or Female washing


Keep pressing the "+" or "-" button of temperature on the remote control, then press the "+" button of flow. Press it again the wash will be on the different massage modes.

Normal : when one indicator light is on

Oscillating : when two indicator lights are on


Pulsating : when three indicator lights are on

Oscillating + Pulsating : when four indicator lights are on

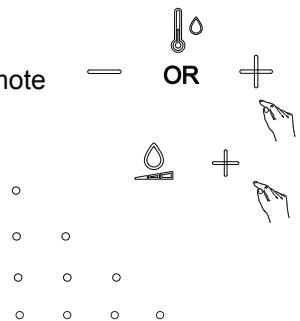

OR

 
You can repeatedly press and hold the "stop" button on the bidet, to choose different massage modes.



Stop Operation


- In the process of Rear washing or Female washing

 Press the "Stop" button on the remote control it will stop washing .



OR

 You can press the "stop" button on the bidet , it will stop washing



Adjusting flow rate

- Default 3 rd
- In the process of Rear or Female washing

Press "+" or "-" button of flow on the remote control to adjust the flow rate .

 


OR

In the process of rear washing, you can press the "Rear wash" button on the bidet to adjust the flow rate, and in the process of female washing, you can press the "Female washing" button to adjust the flow rate.

NOTE :


When you adjust the flow rate by the button on the bidet, it has only 3 steps at this time.



Adjusting the nozzle position

- Default 5 th
- In the process of Rear or Female washing

Press "+" or "-" button of position on the remote control to adjust the nozzle position forward or backward.

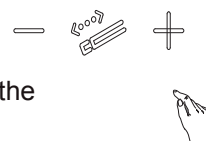

OR

You can repeatedly press and hold the "rear wash" button on the bidet to adjust the nozzle position, the nozzle position will switch between cycles.

NOTE :

When you adjust the nozzle position by the button on the bidet, it has only 3 steps at this time.



Adjusting temperature



Press "+" or "-" button of temperature on the remote control to adjust water temperature .

OR



You can repeatedly press and hold the "female wash" button on the bidet to adjust the water temperature, the water temperature will switch between cycles.

NOTE :

When you adjust the water temperature by the button on the bidet, it has only 4 steps (include "OFF") at this time.

Power Standby Setting

• Not washing


Keep pressing the "stop" button on the bidet, it will go into power standby mode .



Press again the "stop" button to restart it .

Light Setting

Keep pressing the "+" or "-" button of temperature on the remote control, then press the "-" button of position. Press it again the night light will be on the different mode just as "close", "always on".

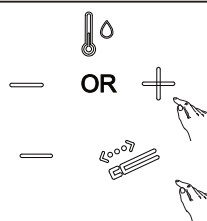

Close mode : when one indicator light is on ○

Always on mode : when two indicator lights are on ○ ○

OR

 
Not washing

You can press the "stop" button on the bidet to adjust the night light is "ON" or "OFF".



Side Button Light

Keep pressing the "Female wash" button on the bidet for more than 2S, the side button light will be lighted off. It will be lighted up again when pressing the button for more than 2S.



UV Sterilization (optional)

° Not working and not be seated

After the cleaning function is finished, enter the idle state for more than 30s, then start UV sterilization for 30s.

The bidet lasts for more than 12 hours in an idle state then starts UV sterilization for 30s.




All the operation is just for the model with all features. If the model what you bought has no the feature, please ignore the corresponding operation.

Care and cleaning

• General care and cleaning recommendations

Maintaining interval	Maintaining activity
Daily	Remove water drops with a soft ,lint-free cloth to avoid limescale stains
Weekly	Clean all surfaces and corners .Clean the spray nozzle if required. See "Nozzle cleaning "
Monthly	Clean the WC ceramic appliance with a low acidic cleaning agents
Every half year	Replace the filter if required.

• Cleaning agents and tools

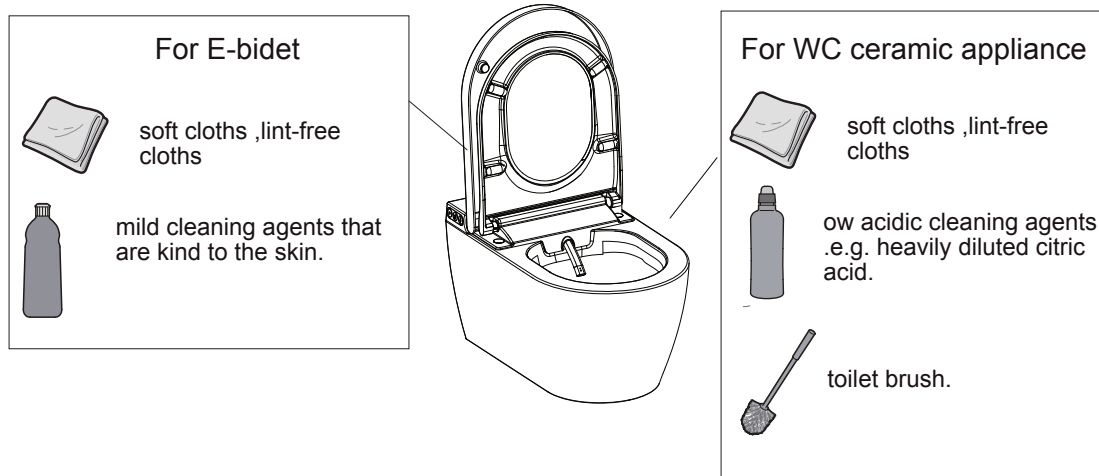

Do not use the cleaning agents of strong acid and alkali to clean the E-bidet ;
Do not use the hard brush .e.g. toilet brush nylon brush to clean the WC ceramic appliance ;
Do not use the metal brush.

Self-clean the tank




Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 1 minutes. When press the "Stop" button on the remote control, it will return to normal .

Nozzle Cleaning

- The nozzle will be cleaned before washing and after washing .


The operation of manual cleaning is as follows

In free mode, press and hold the "rear wash" button on the bidet. Then the nozzle will extend with cleaning water. It will return after 5 minutes or press the " stop " button .

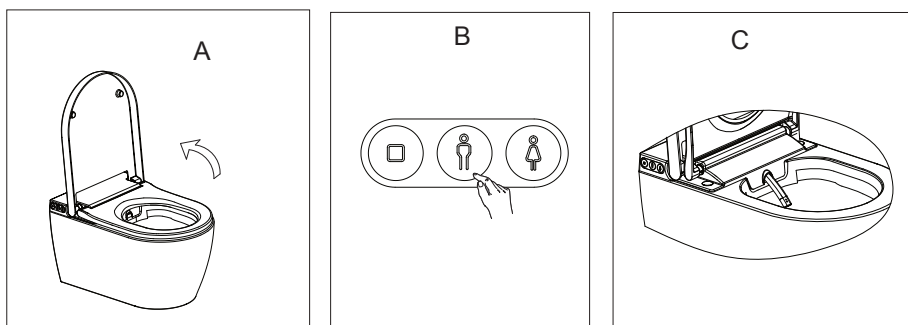

Replacing the filter

- The filter has a service life of half a year . This is depended on the environment of water. The filter should be replaced when the wash flow is too small .


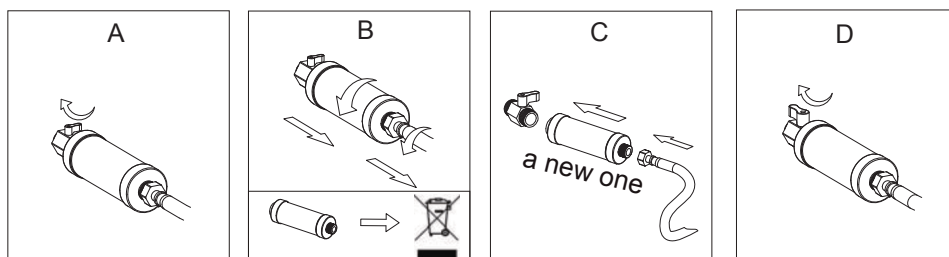


Drain the water tank



DANGER

1. The water and power must be cut before you disassemble the E-Bidet
2. Do not invert or tilt it before you finish draining the water tank

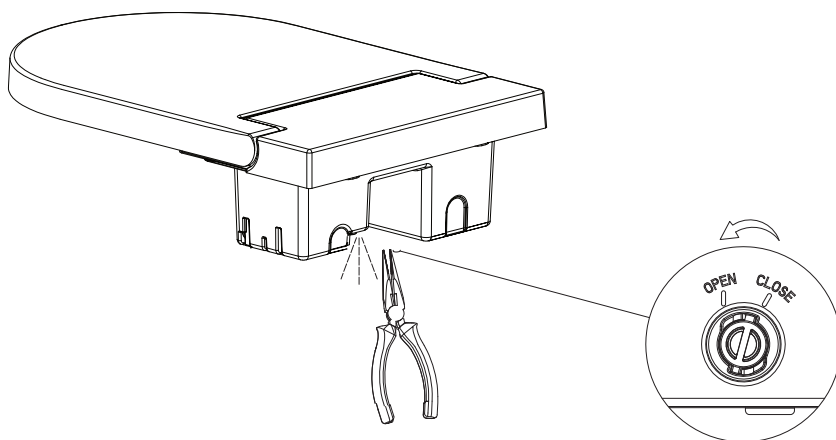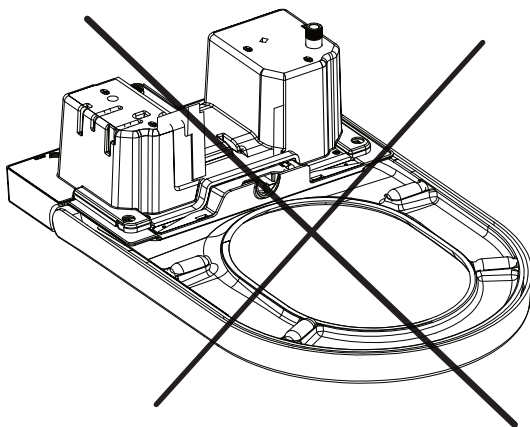


1. Hold the plug with the tipper, turn to "OPEN", and pull out. It will start to drain.
2. After completing the drainage, insert the plug and turn to "CLOSE".


Release and install cover & seat

Replacing the cover-the operation of seat is the same as the cover


A

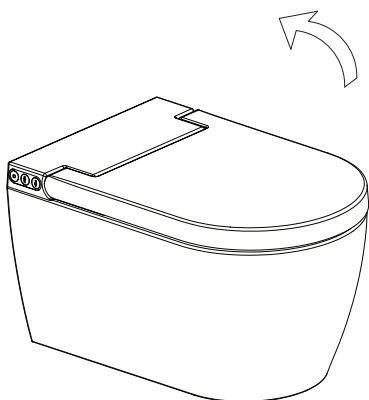


B

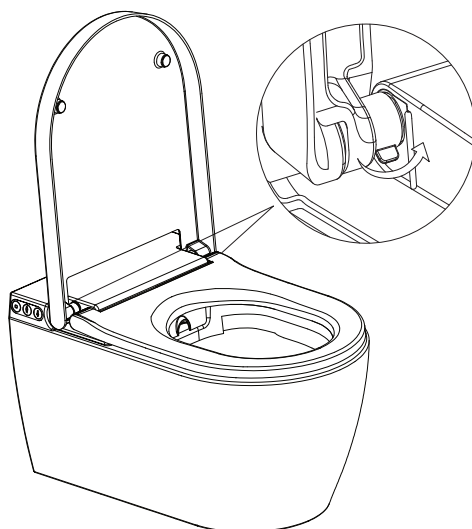

C

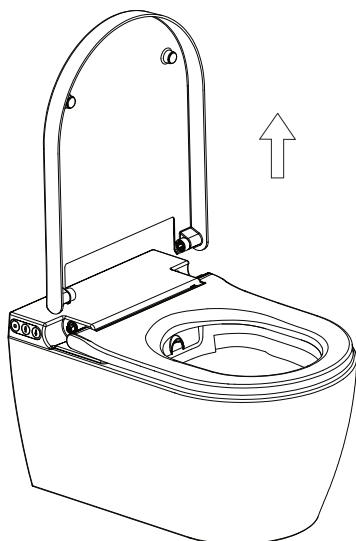


D

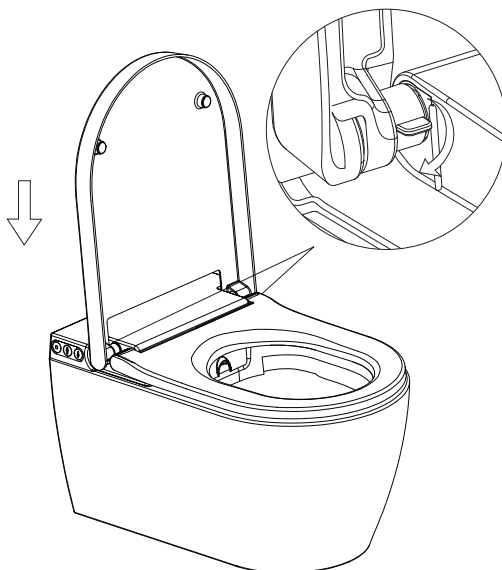

Connect the remote / One-ON-One Setting

If you need to re-connect the remote control or you want to Install several electronic bidets in the same area, and you want each remote control to control the specified electronic bidet, please complete setting as per following steps.

1. Open cover and not be seated.
2. On the remote , simultaneously press and hold the "stop" button and "shift" button of adjust temperature until all five lights are on and then the indicator light of first steps flicks.
3. Release the "stop" button, but keep pressing the "shift" button.
4. Press the "-" and "+" of the flow in order, and then release the "shift" button. At this time, the lighted indicator is the current ID code of product .
5. By pressing "- , or ,+" buttons of the flow you can change different product ID code with the corresponding indicator lights up. There are 32 ID codes in total. It is on the first code by default and the first step light lights up.
6. After selecting the product code ,press the "stop" button on the bidet, then press the "stop" on the remote control. when long "beep" sound heard, the setting is finished.

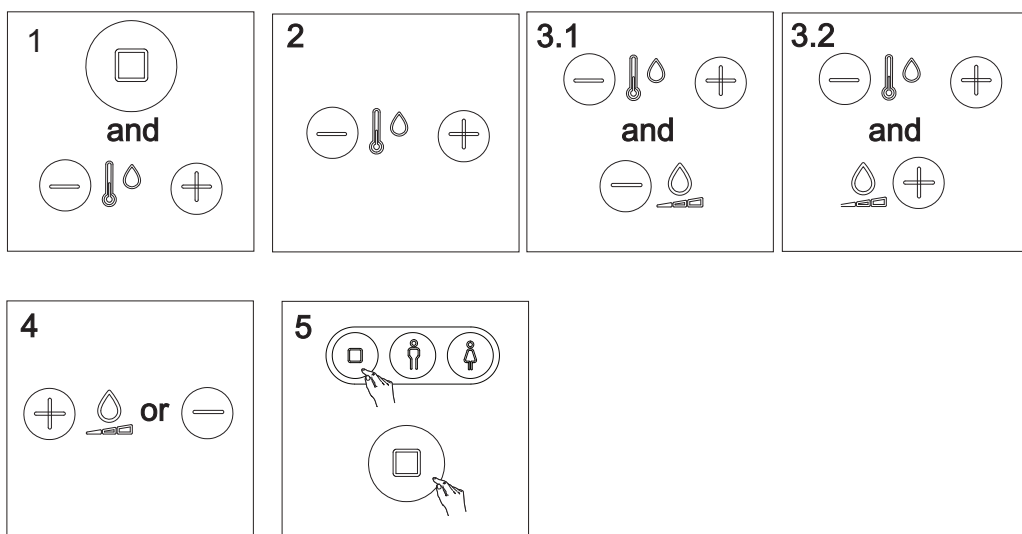


Replacing the batteries

- The remotecontrol requires 2 batteries (type3V CR2032).
- When the level light flashescontinuously , please replace the batteries in time.



NOTICE

1. Non-rechargeable batteries are not to be recharged
2. Rechargeable batteries are to be removed from the appliance before being charged
3. Different types of batteries or new and used batteries are not to be mixed
4. Batteriesare to be inserted with the correct polarity
5. The exhausted batteries are to be removed from the appliance and safely disposed of
6. If the appliance is to be stored unused for a long period, the batteries should be removed
7. The supply terminalsare not to be short-circuited

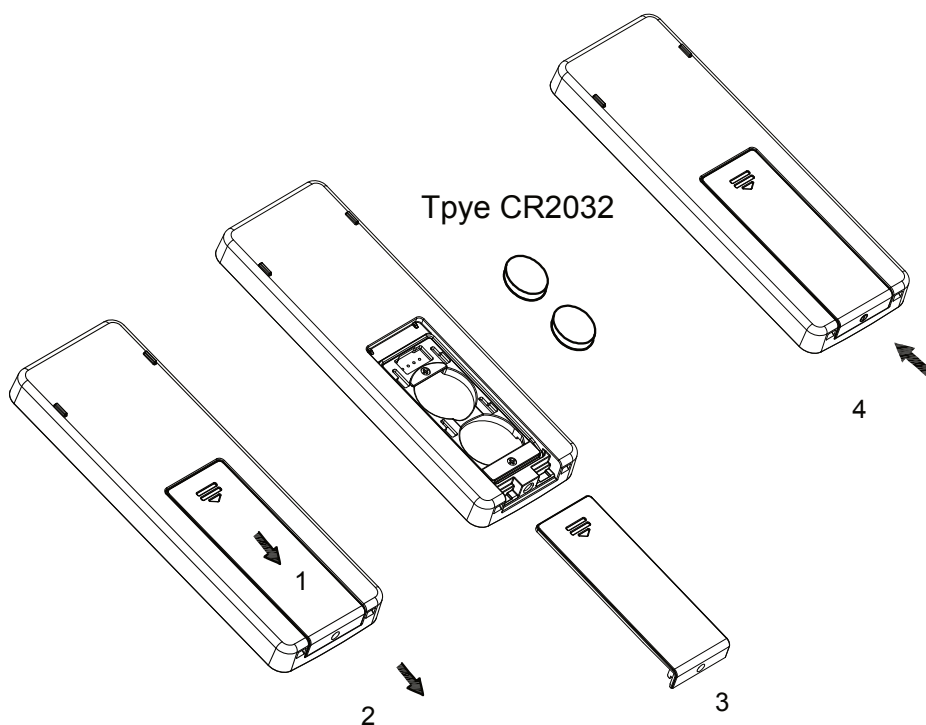

Troubleshooting

Problem	Potential cause	Suggested action
The washing can not work	1. The power supply may not be opened	Please turn on the power
	2. The water supply may not be opened	Please open the inlet water valve, or check if there is a water outage
	3. The filter may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.Maybe the cover is closed	Please open the cover and sit on the seat
	5.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 1 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
The nozzle goes back suddenly	1.The washing cycle is 3mins. The nozzle will stop spraying after 3mins ,and then go back.	This is normal and please re-press the "wash" button to start washing again
	2.There may be some problems of water supply	Please check if there is a water outage
	3.Maybe the cover is closing	Do not put down the cover when it is washing
Low water flow rate	1.The water flow rate may be set at low grades	Please increase the flow rate as per "adjusting water flow rate" of operating instructions
	2.The water supply pressure may be too low	Please check and ensure the water supply pressure is 0.07Mpa
	3.The filter may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.The nozzle may be blocked	Please replace a new nozzle
Low water temperature	1.The water temperature may be set at low grades	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions
	2.Maybe the temperature of water supply is too low	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions, or decrease the flow rate as per "adjusting water flow rate" of
The nozzle comes out slowly	When start washing function, the nozzle will be self-cleaning before coming out, and this will take some	This is normal
The water flows out but the nozzle do not come out	1.When start washing function, the nozzle will be self-cleaning before coming out .When the washing is over ,also have this feature	This is normal
	2.Maybe it is not used for more than 72 hours	This is normal. Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 1 minutes
The dryer can not work	1. The power supply may not be opened	Please turn on the power
	2.Maybe the cover is closed	Please open the cover and sit on the seat
	3.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 1 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
Low air temperature	1.The air temperature may be set at low grades	Please set the air temperature at high grade as per "adjusting temperature" of operating instructions
	2.The air heater can not work normally	Please contact local distributor
Night light is always off	1.Maybe in the bright environment.	When the night light is set at smart mode, the night light will not work when in the bright environment.
	2.The night light function may be closed.	Please open the night light function and adjust the night light mode as per "Light Setting" of operating instructions
Night light is always on	1.Maybe in the dark environment.	When the night light is set at smart mode, the night light will be always on when in the dark environment
	2.Something may be covered around the knob.	Recover the obstructions around the knob
	3.The night light may be set at always on mode	Please adjust the night light mode as per "Light Setting" of operating instructions
The nozzle goes back automatically when manual cleaning	1.The nozzle goes back after washing 5 minutes.	This is normal
	2.Maybe press the "stop" button	The manual cleaning will be stopped if press the knob or press the "stop" button on the remote control.
The remote control is not functioning	1.Maybe there are not batteries in the remote control	Please install the correct batteries in the remote control
	2.Maybe the battery power is too low	When the battery power is too low the LED of grade will flash. Please replace the battery
	3.Maybe the code of the bidet and remote control is not the same	Please set the code of the remote control to the correct one .See "One-On-One Setting"
The bidet can not work normally	Maybe there is something abnormal	Please shut off the power and turn on after one minute. If the bidet still cannot work, please contact local distributor
The light around the knob flash twice with constantly BEEP	The water supply temperature may be too high	Please shut off the power and water supply, stop using the product, and then contact local distributor
The light around the knob keep flashing	There may be something wrong with the product	Please check if the electric power and water supply are normal, cut off the power and restart the product. If the bidet still cannot work, please contact local distributor



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.



MZ-PODEX

GmbH & Co.KG

Grundbachweg 3
D-87538 Fischen/Allgäu
Tel. : +49 (8326) 38 67 83-0
Fax : +49 (8326) 38 67 83-5
info@popodusche.de
www.popodusche.de