 


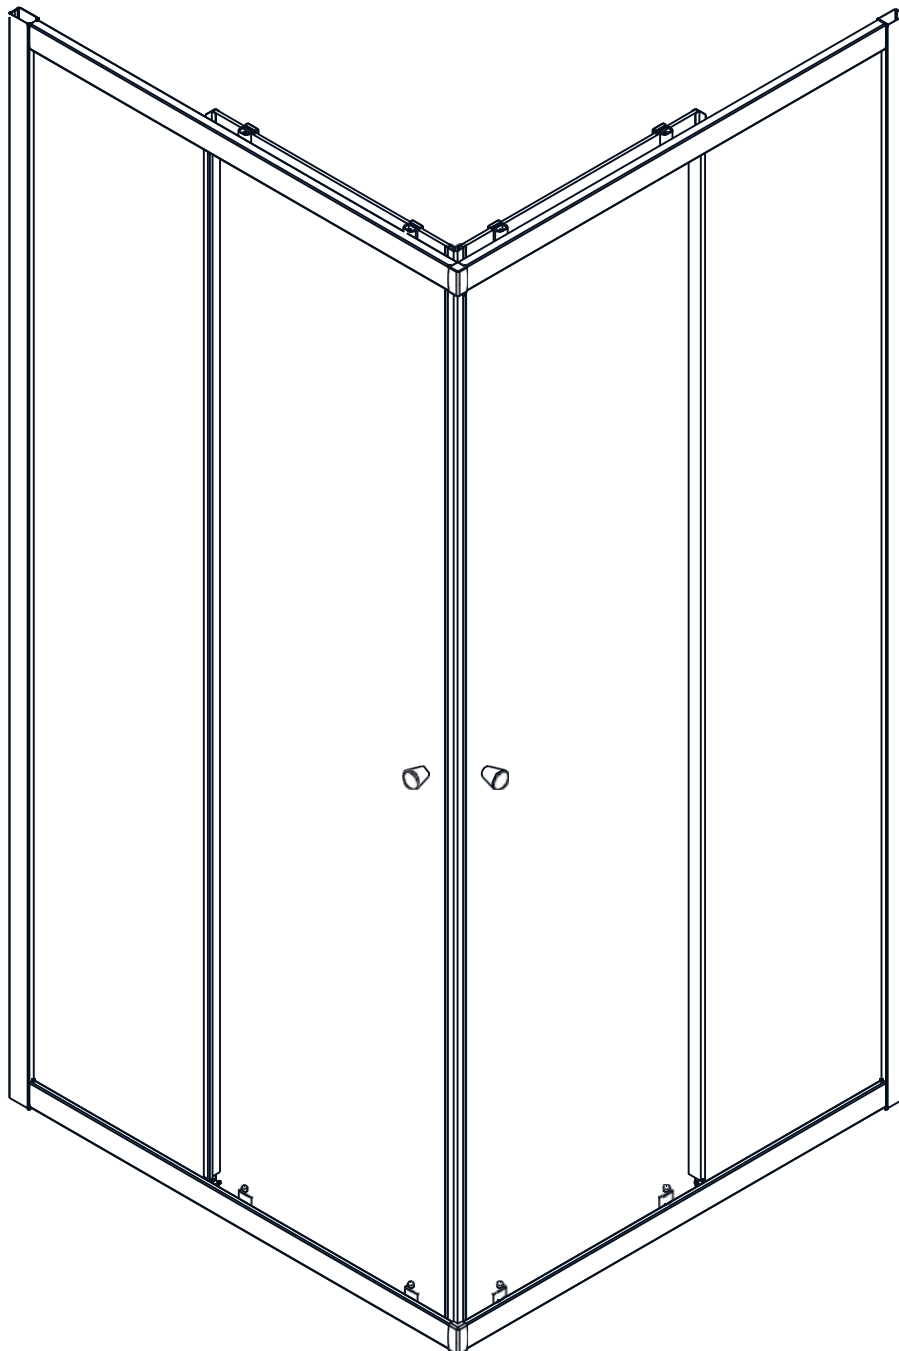 





 
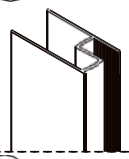 

 

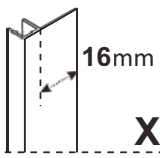 
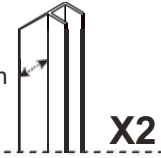 
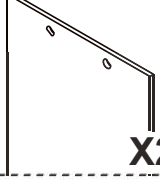 
 



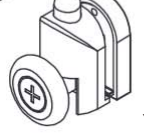 


 
 

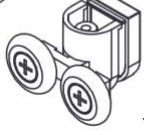 

montážní návod / installation instruction

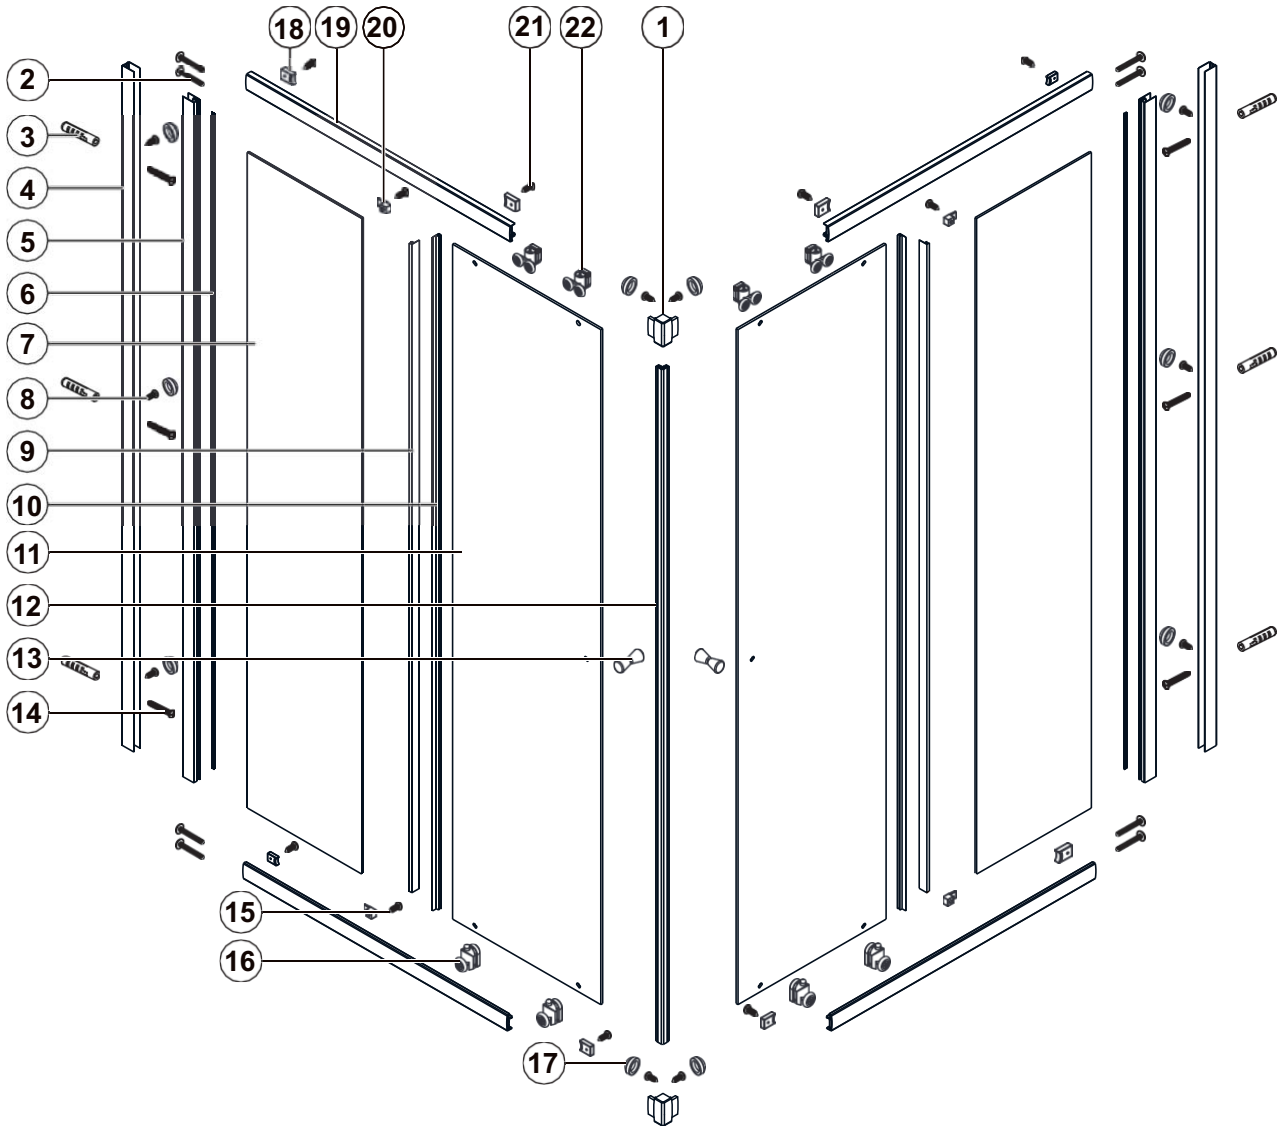BLF808 / BLF909




PARTS LIST




 X2	 ST4*30 X8	 X6	 X2	 X2	 X2
 X2	 ST4*13 X6	 X2	 X2	 X2	 X1
 X2	 ST4*40 X6	 ST4*10 X4	 X4	 X10	 X8
 X4	 X4	 ST4*8 X12	 X4	 Φ3 X1	

 TOOLS



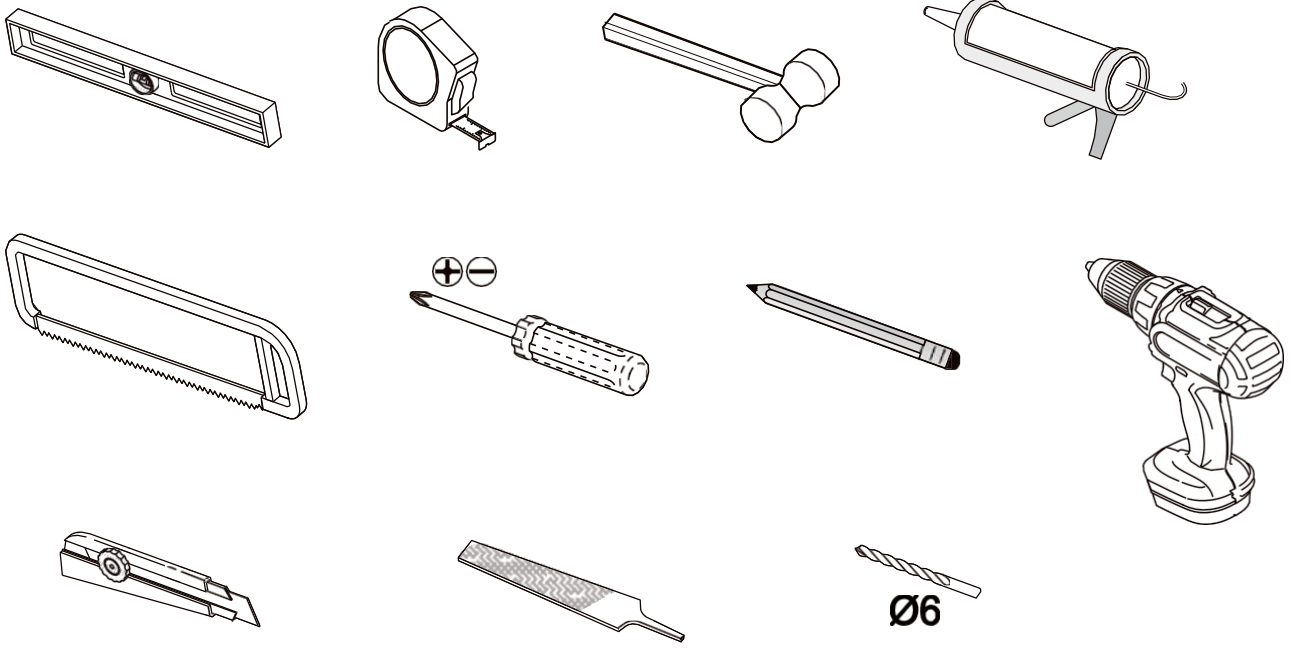


INSTALLATION







 
STEP 1

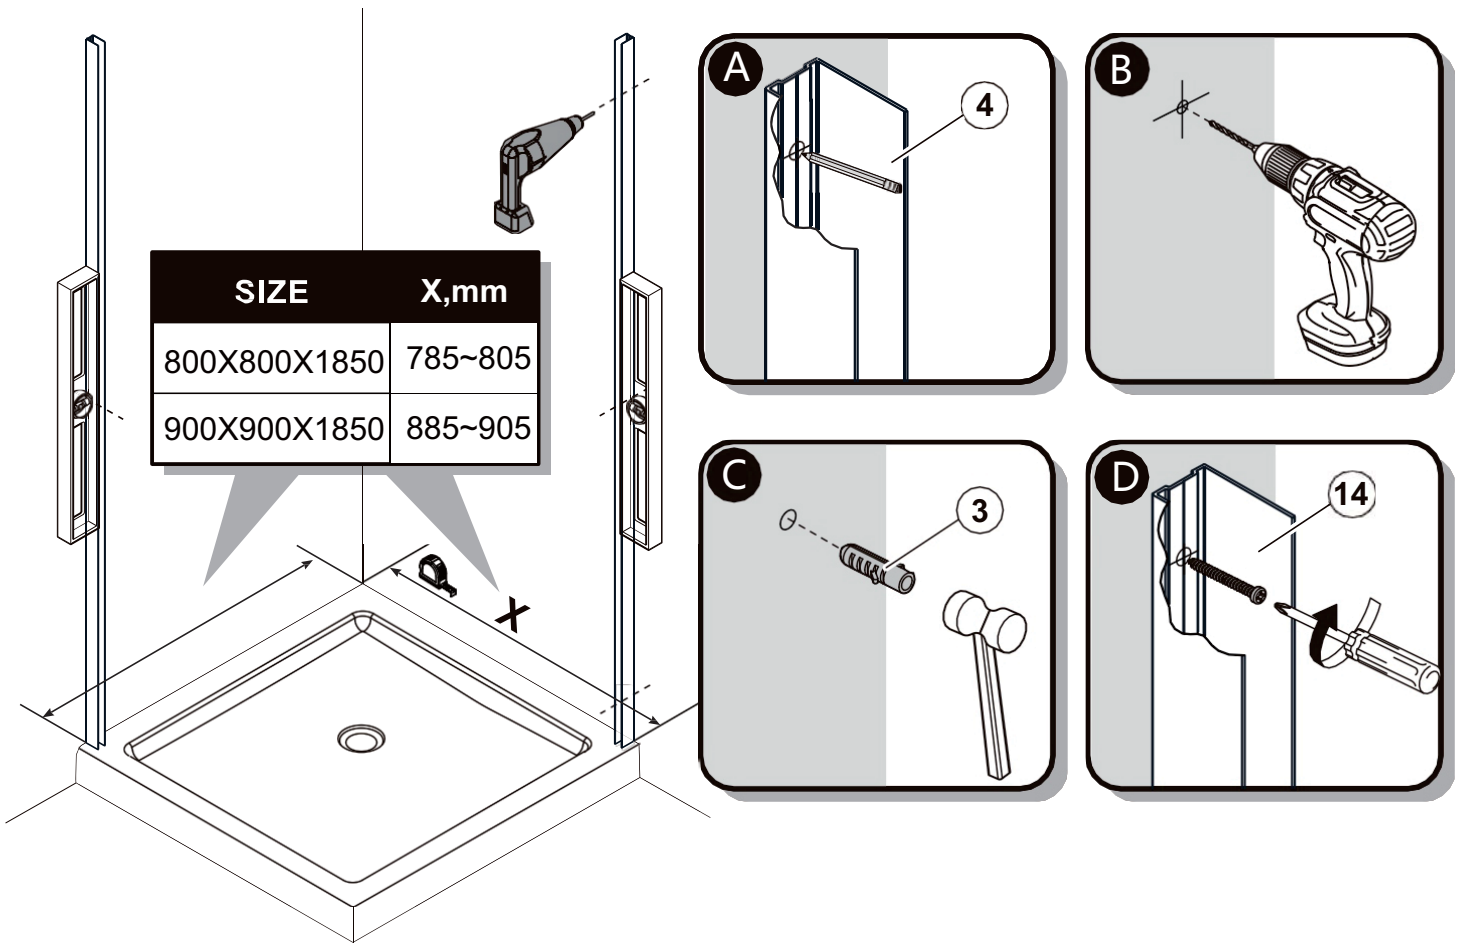





 
 
 
STEP 2

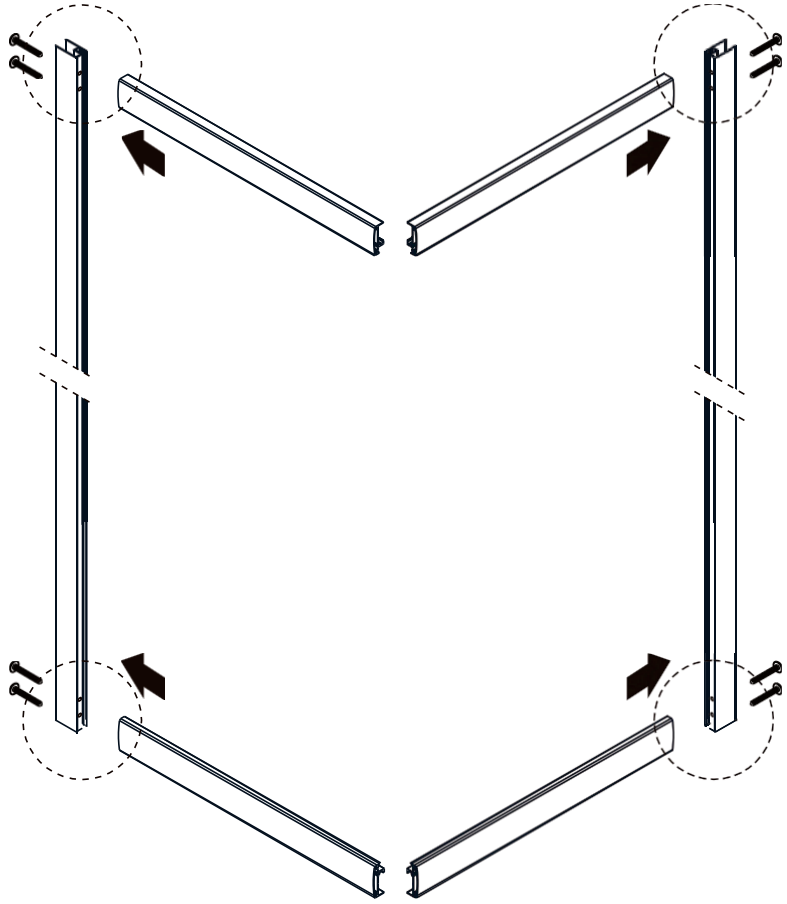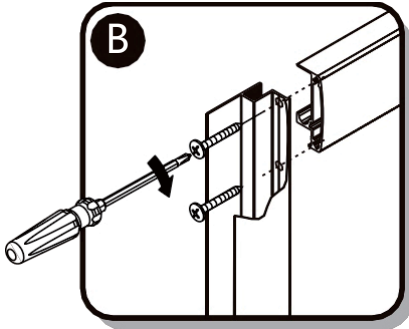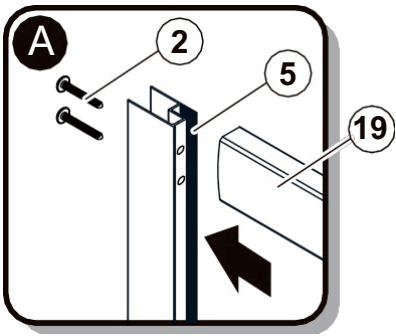

 
 
 
 
 
 
 
STEP 3

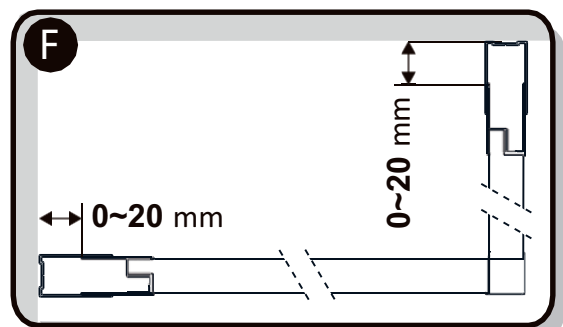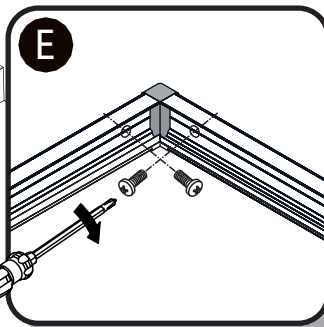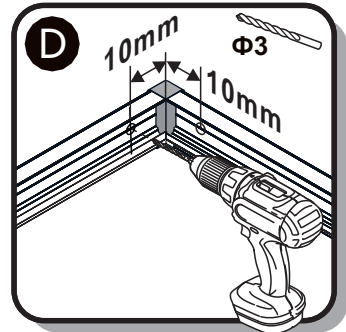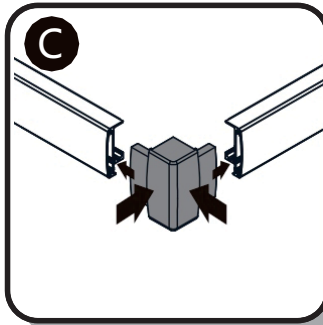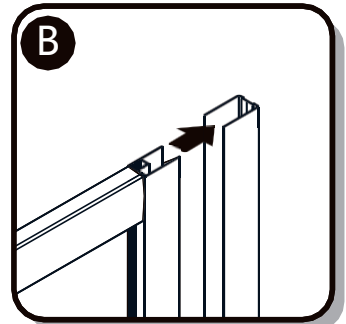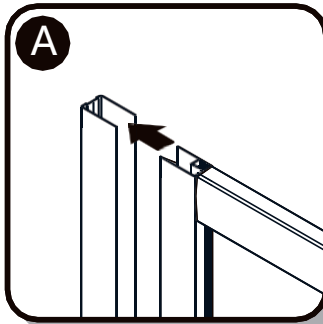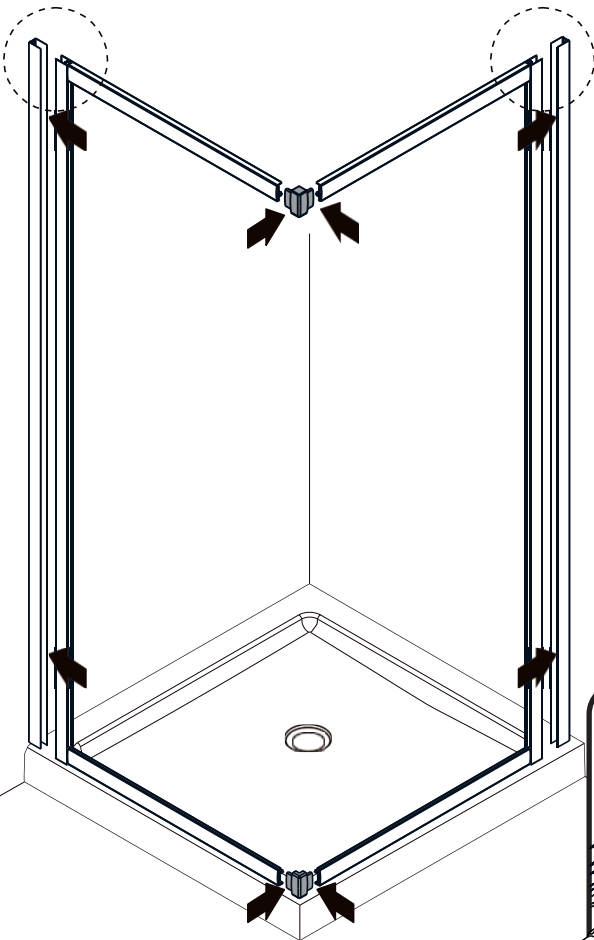

    
 
 
 
STEP 4

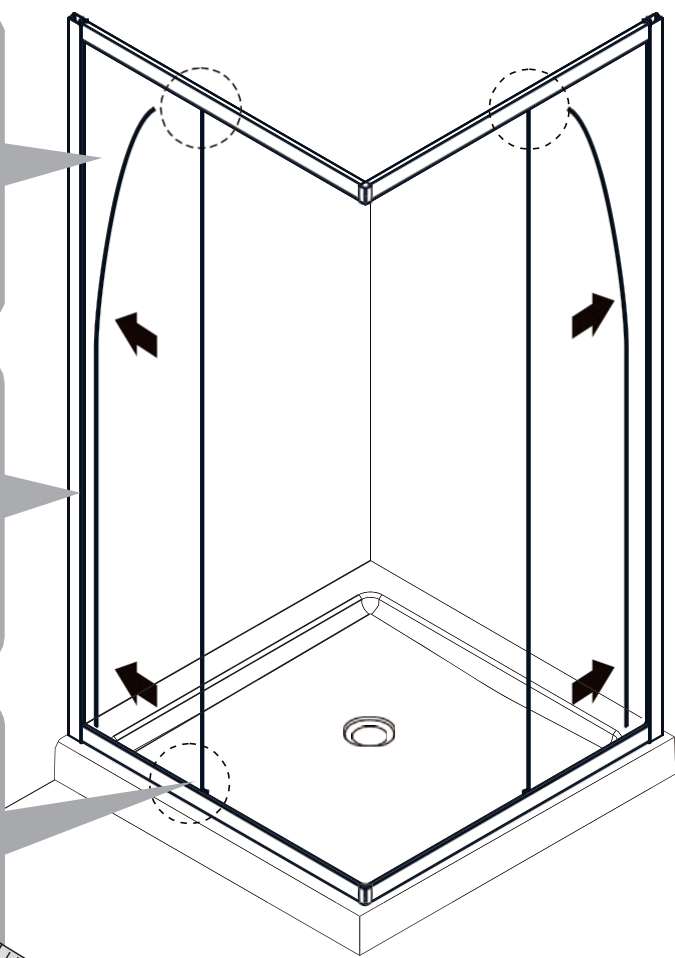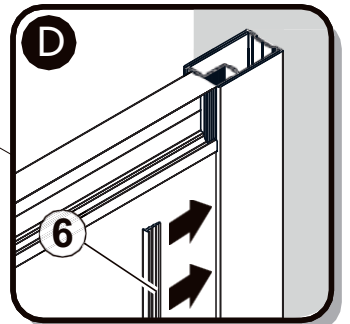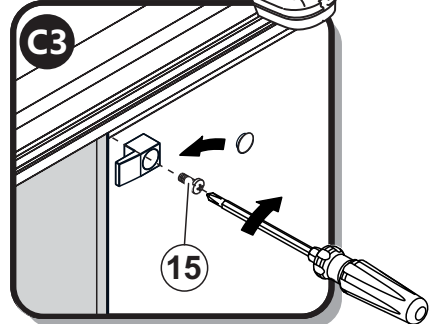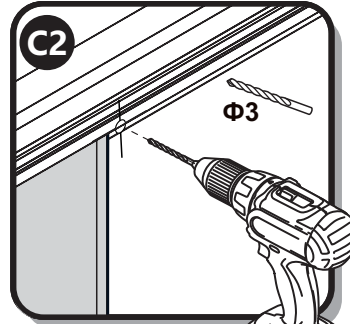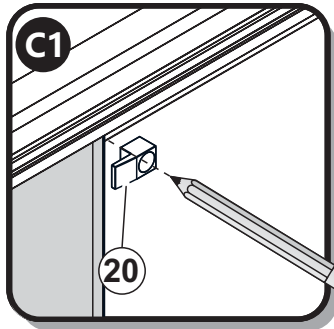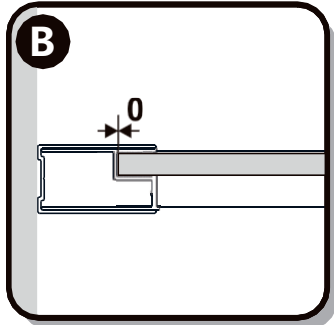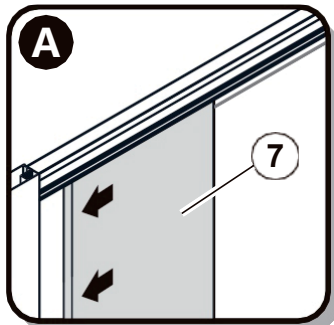

  
 
 
 
 
 
STEP 5

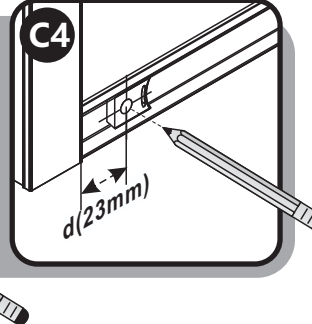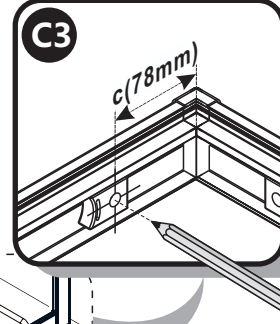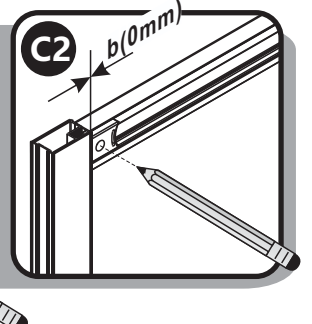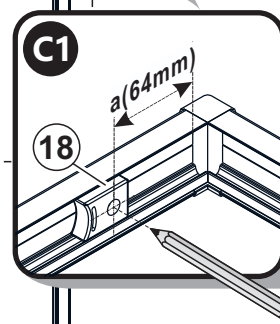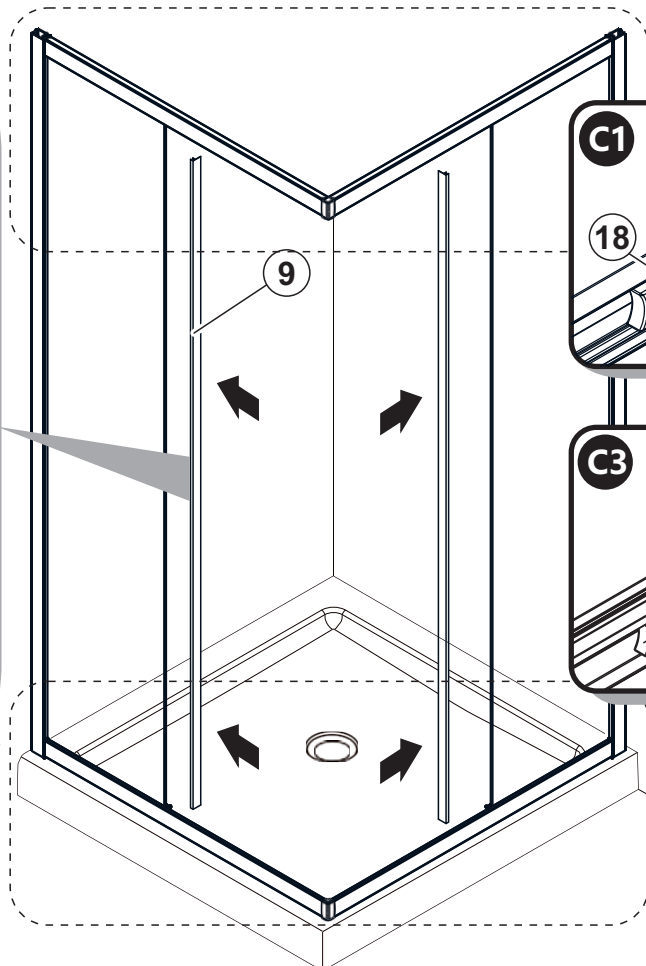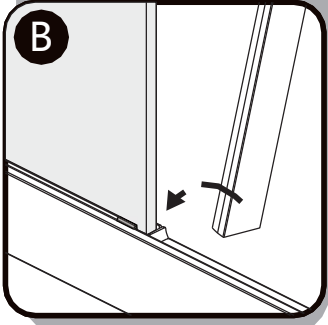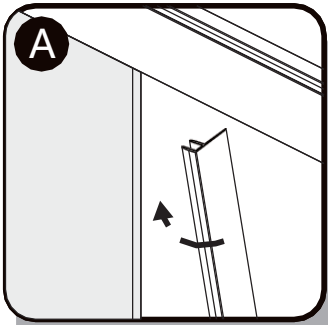

  
 
 
STEP 6

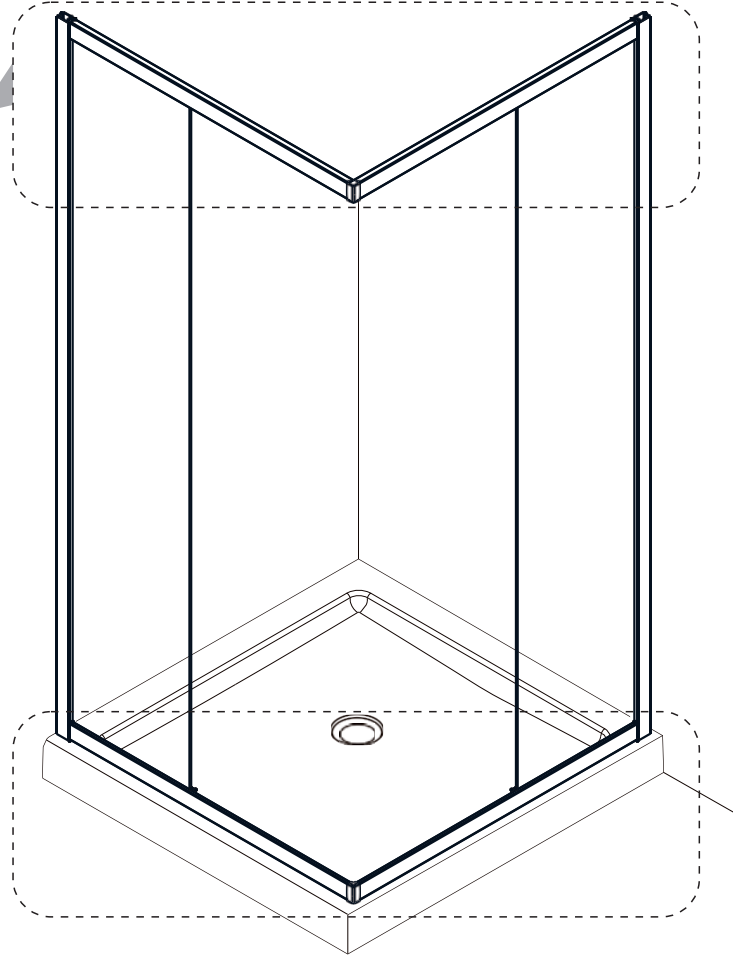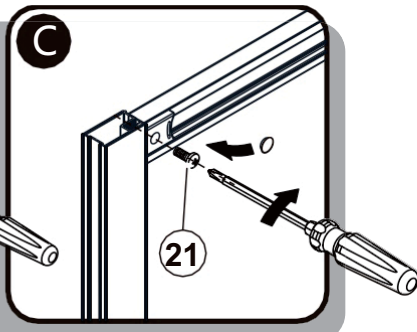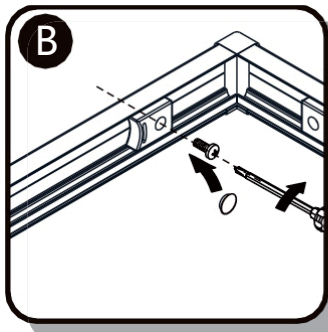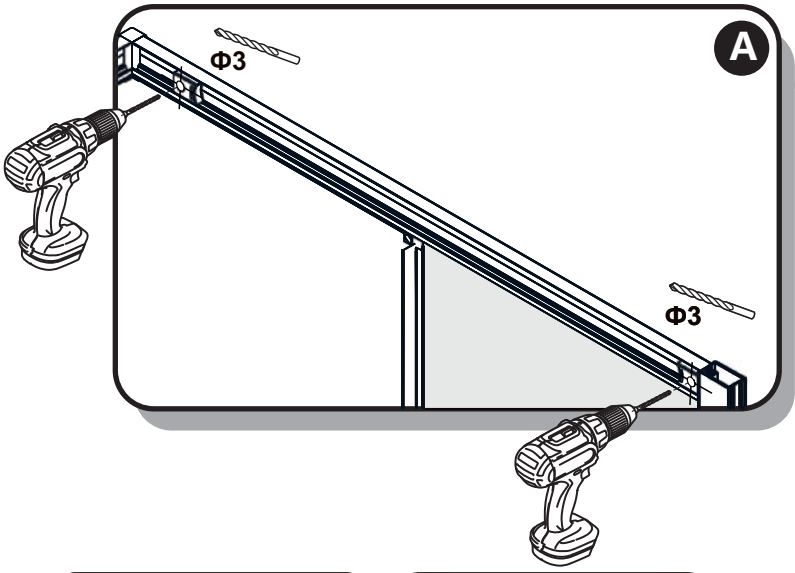

     
 
STEP 7

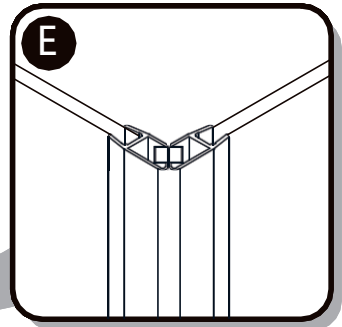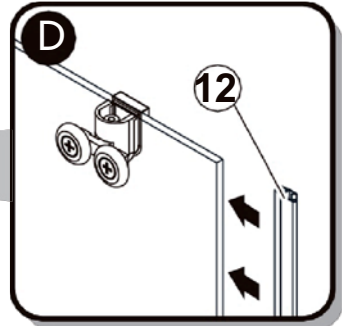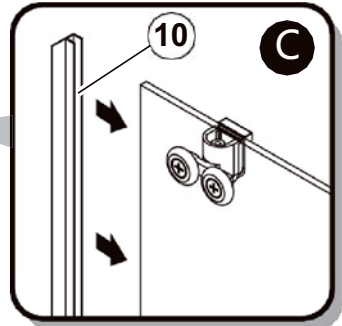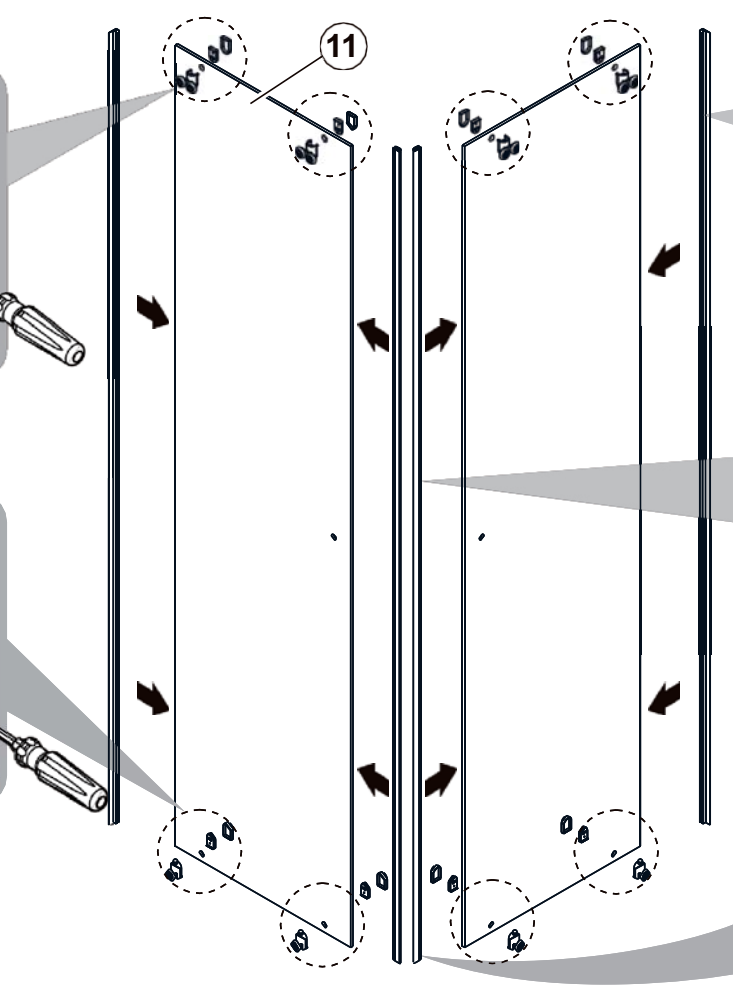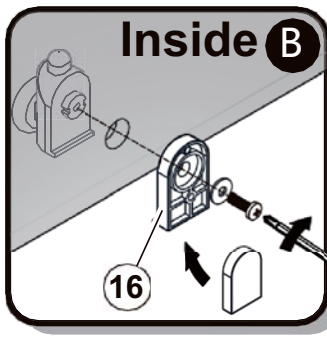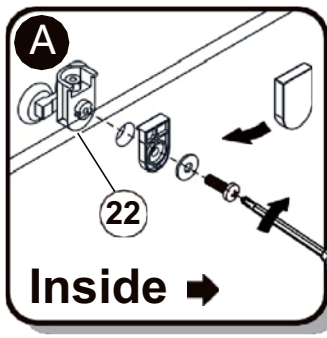


 
 
 
STEP 8

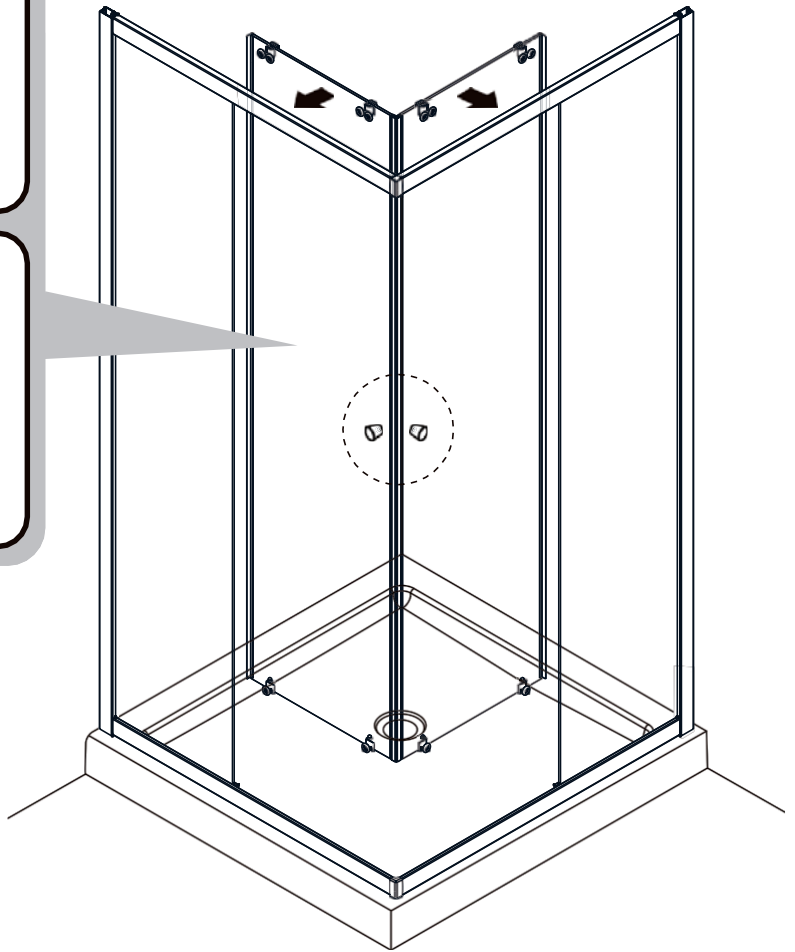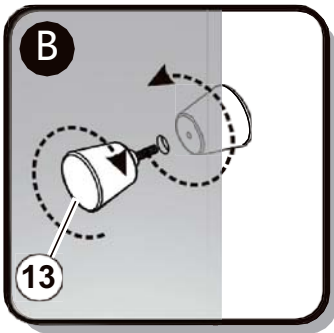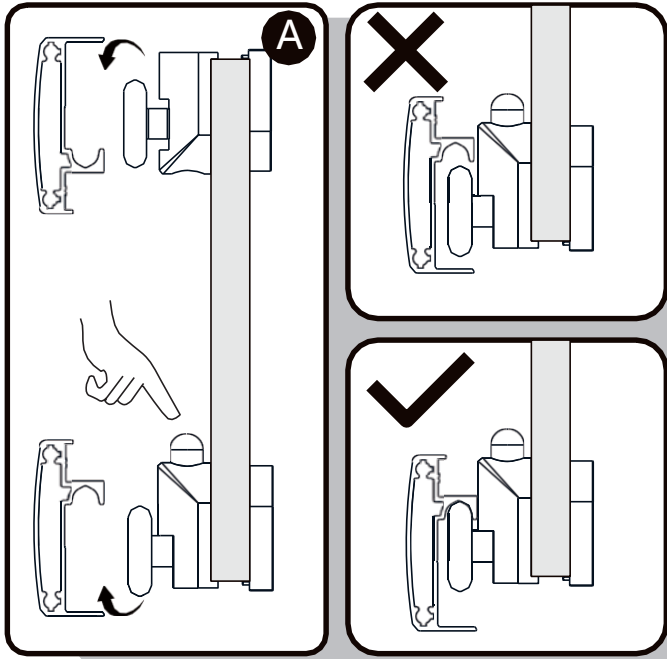

  STEP 9

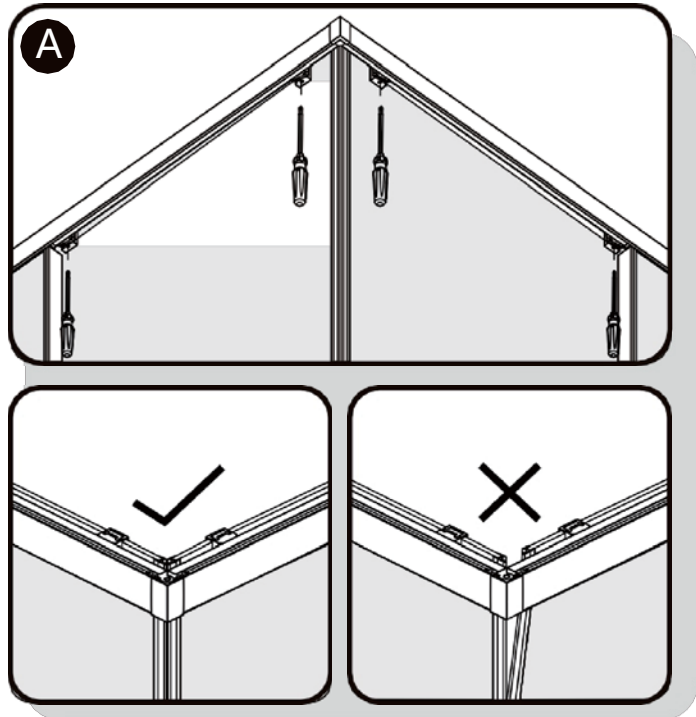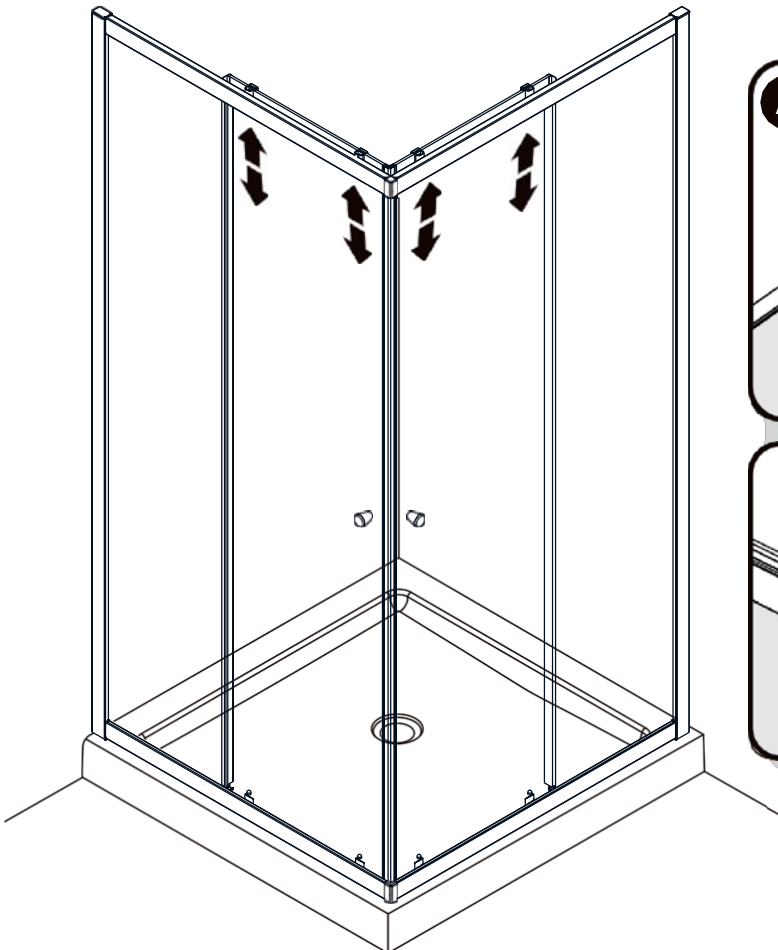

    STEP 10

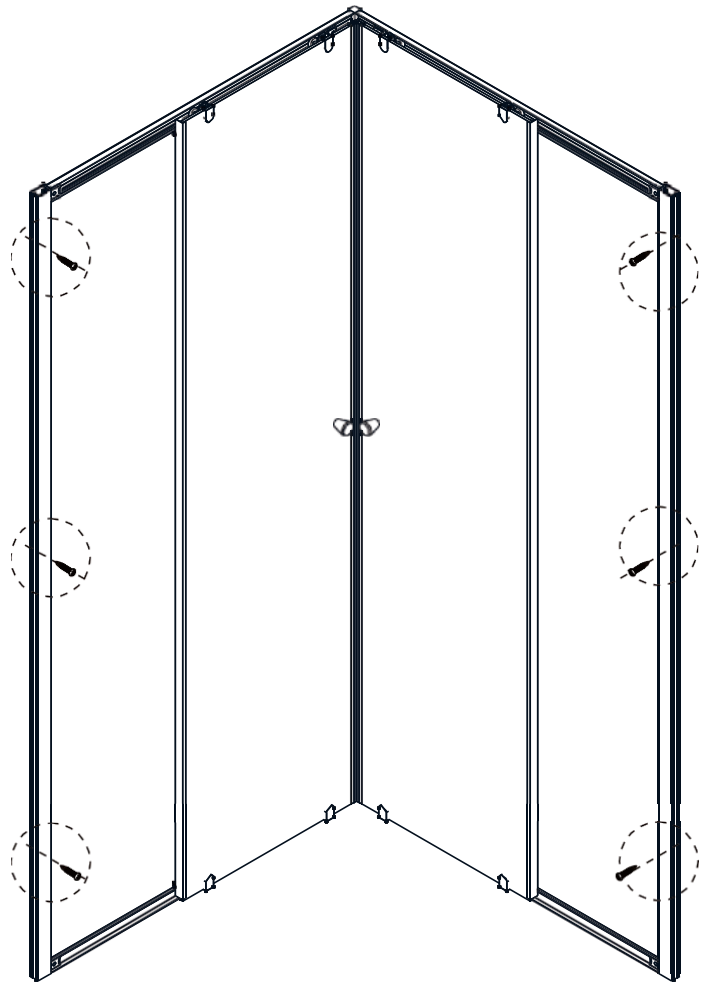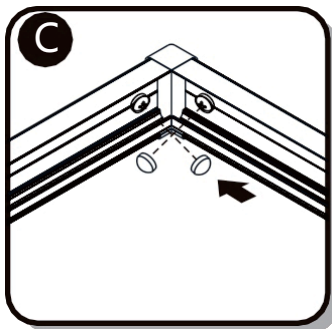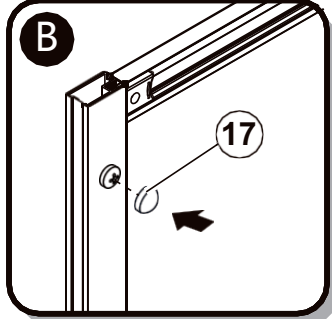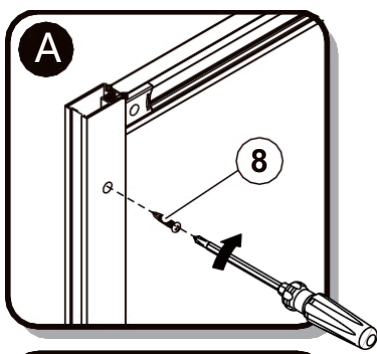

STEP 11

