



Montážní návod
Assembly instruction



HLF708Y
HLF809Y

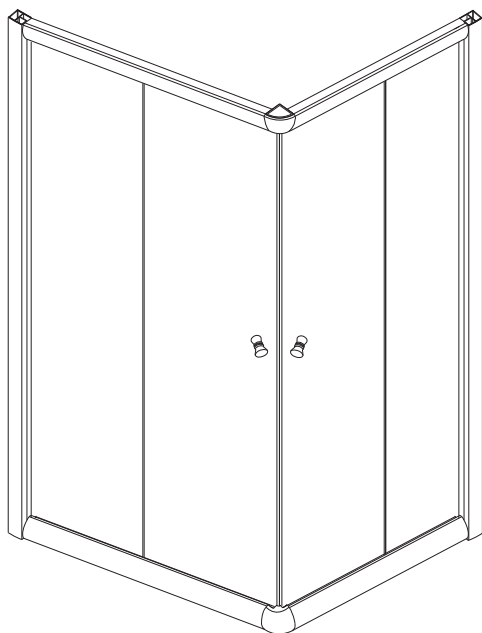

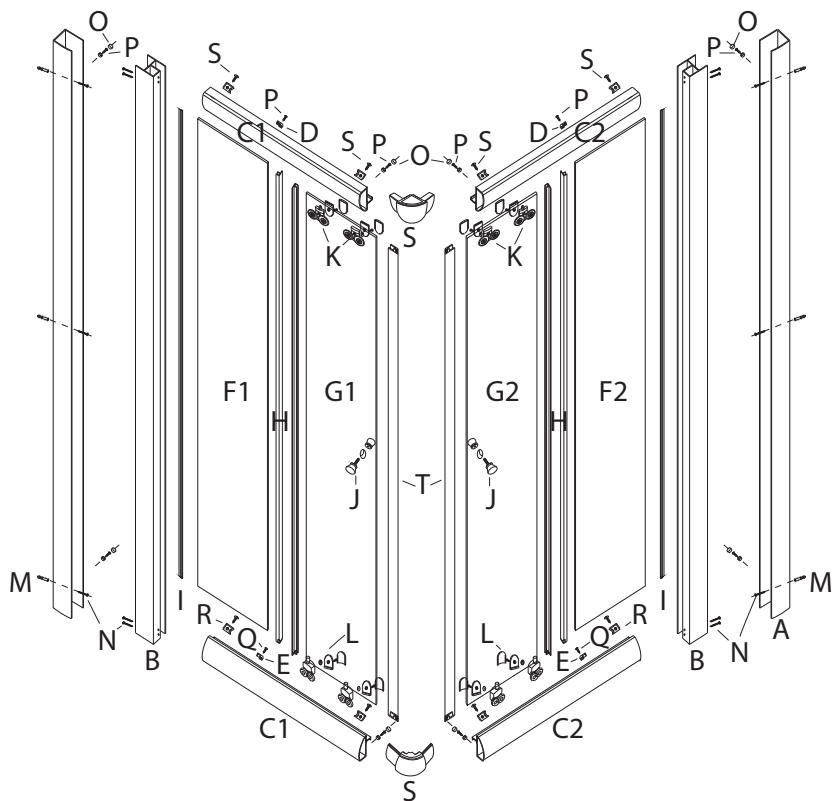


A		x2	I		x2	Q		M4*8	x2
B		x2	J		x2	R			x8
C		x4	K		x4	S		M4*10	x8
D		x2	L		x4	T			x1
E		x2	M		x6	S			x2
F		x2	N		M4*30				
G		x2	O						
H		x4	P		M4*10				



A		x2
M		x6
N	 M4*30	x6

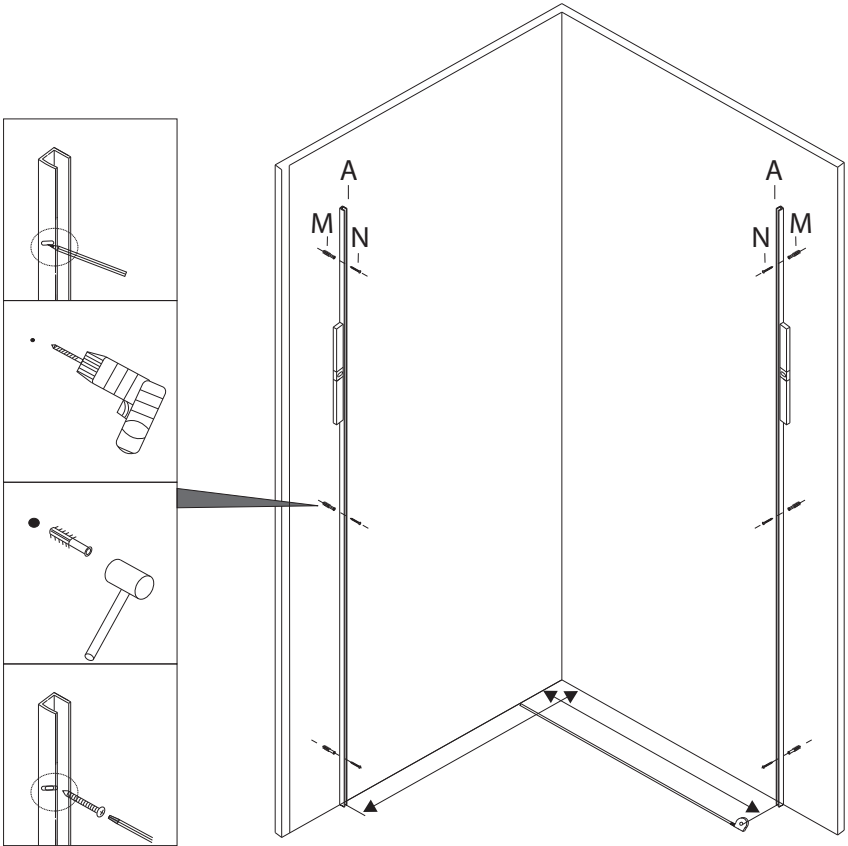 


B		x2	O		x4
C	 	x4	P	 M4*10	x4
S	 M4*	x2	N	 M4*30	x8
R		x8	S	 M4*10	x8

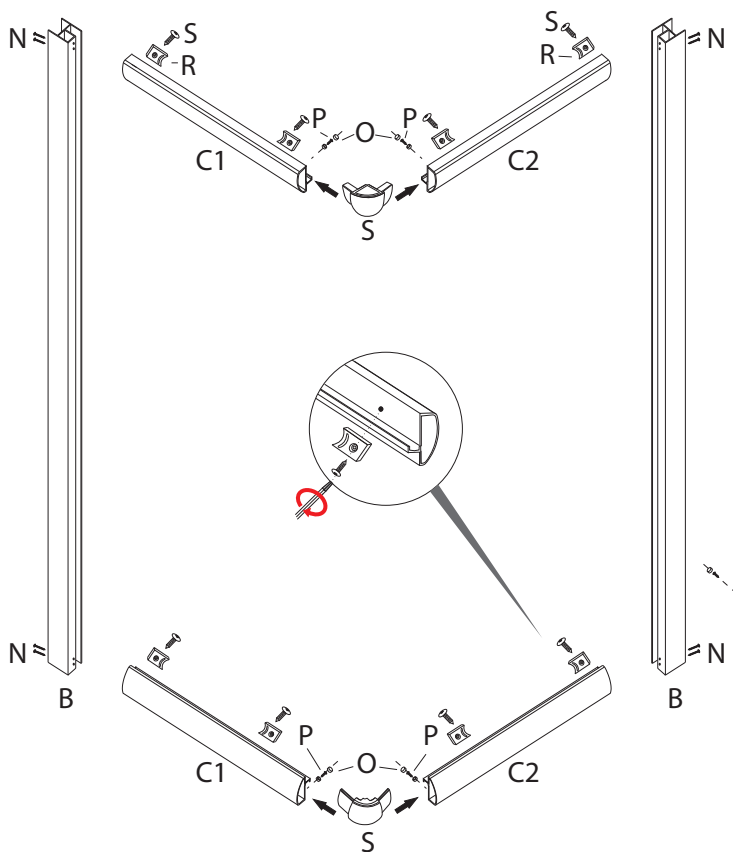

O		x4
P	 M4*10	x4

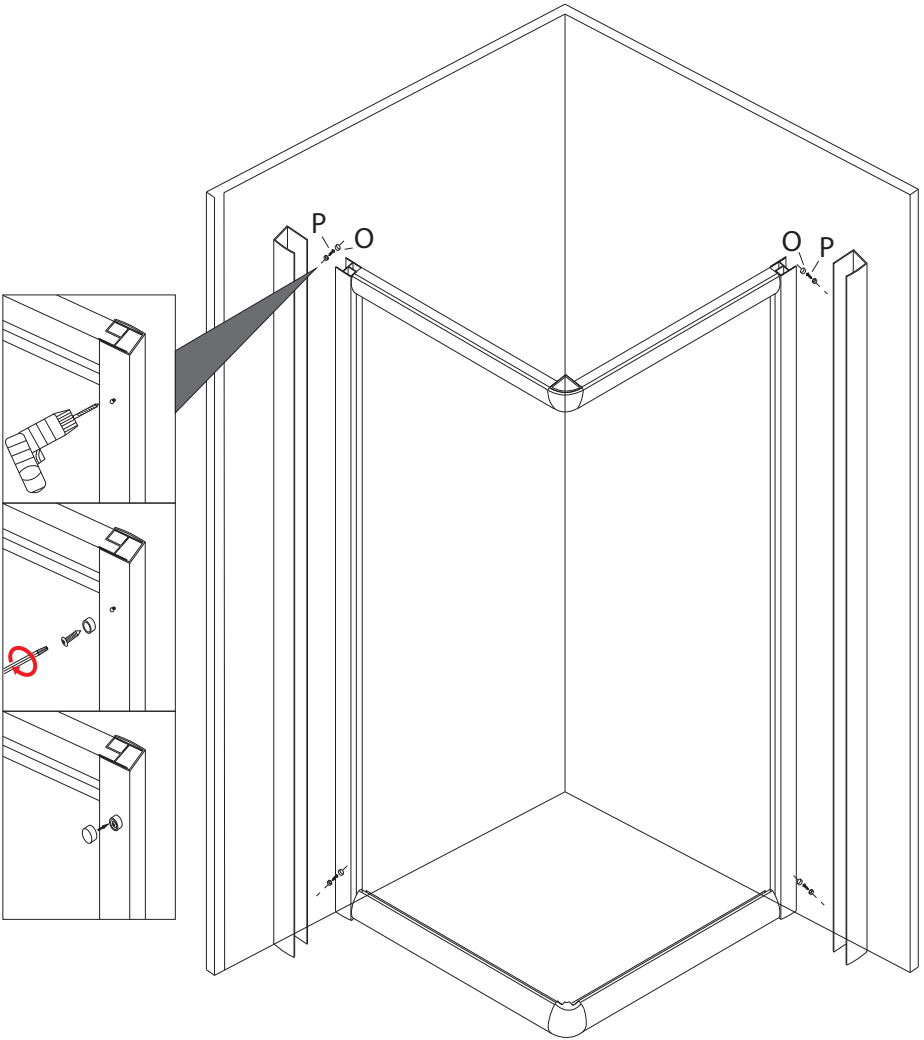 

D	 	x2	H		x2	
E		x2	P	 M4*10	x2	
F	F1  F2 	x2	Q	 M4*8	x2	
I		x2				

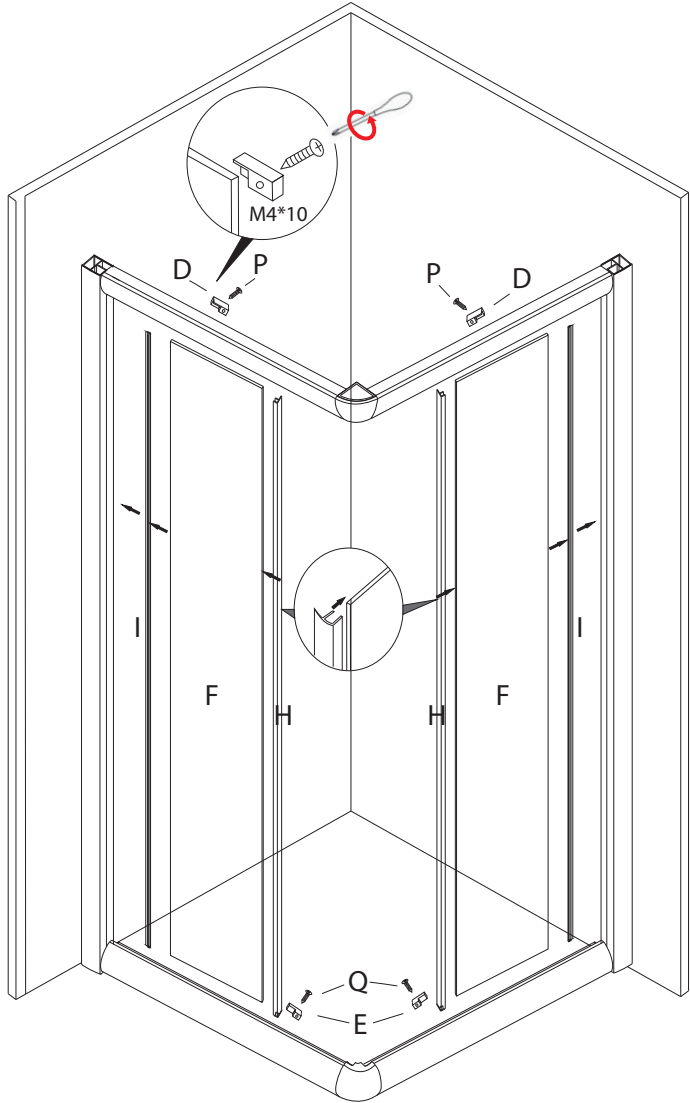

J		x2
---	--	----

