


# montážní návod / installation instruction

FA650/FA750/FB650/FB750

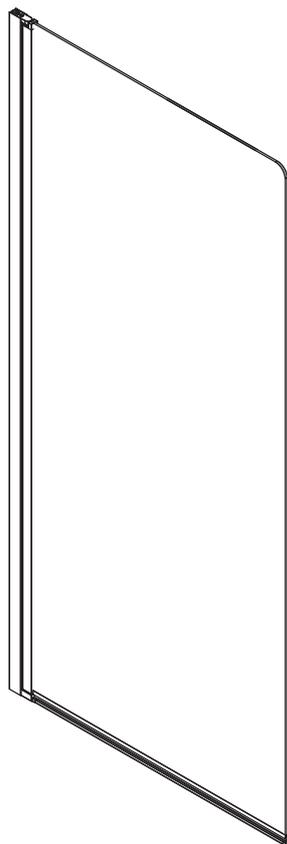

**polysan** 

Polysan s.r.o.


Nesměřice 52

285 22 Zruč nad Sázavou

Czech Republic

[www.polysan.cz](http://www.polysan.cz)

1x

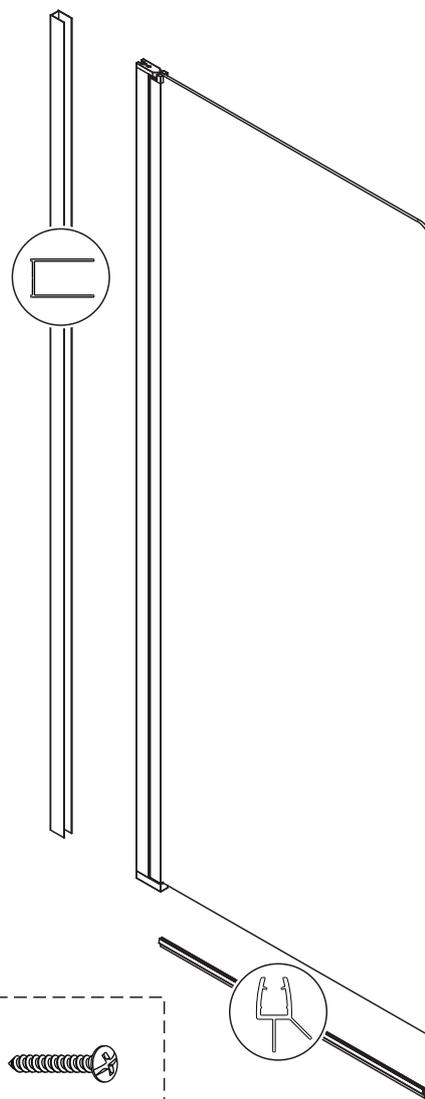

3x







$\Phi 6$  ST4x40




3x



ST4X13

1x

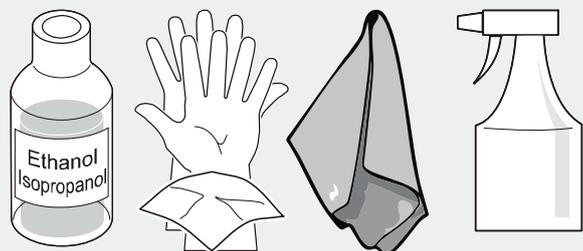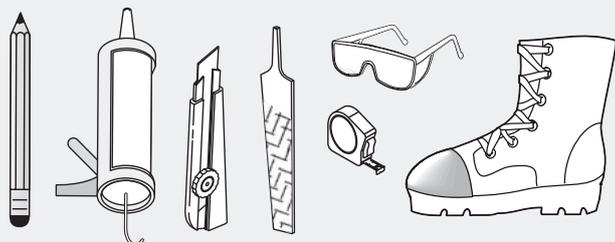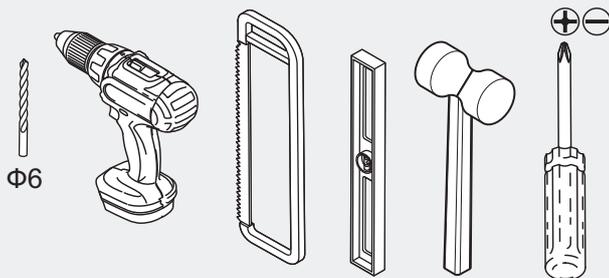

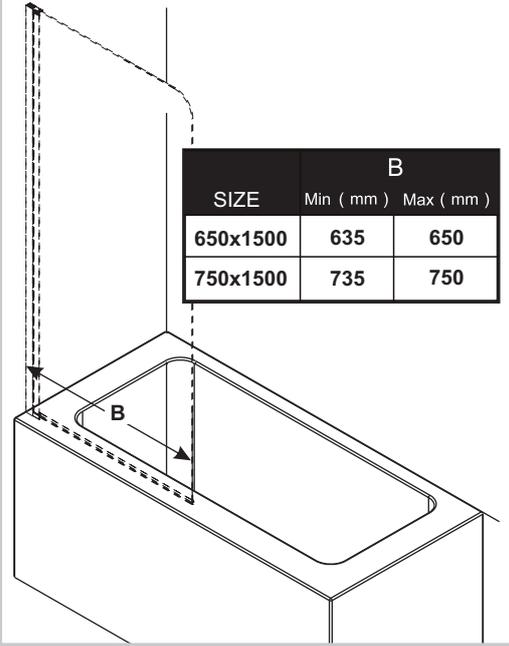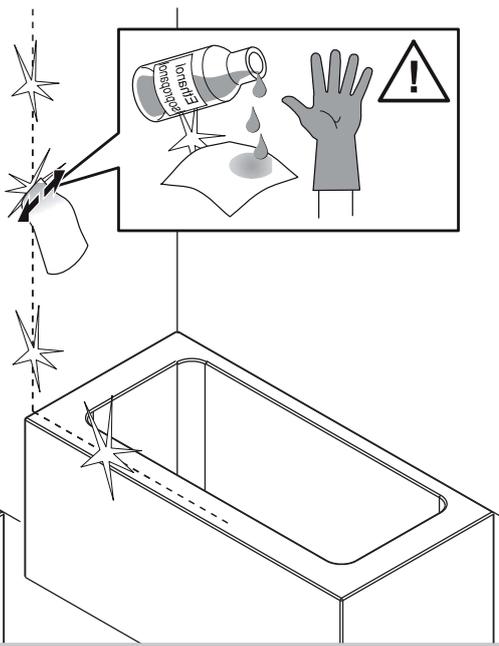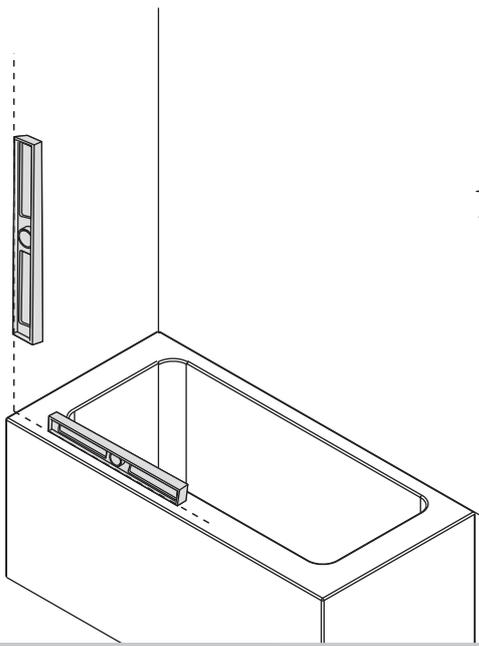






SIZE	B	
	Min ( mm )	Max ( mm )
650x1500	635	650
750x1500	735	750

L

R


### ATTENTION

Upside down the vertical gasket for R door opening

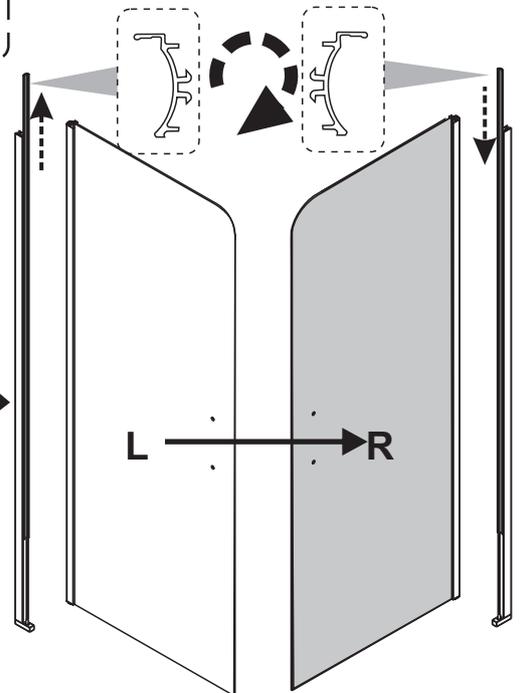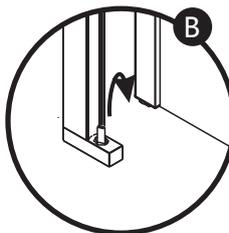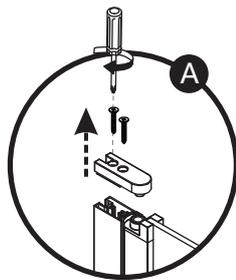
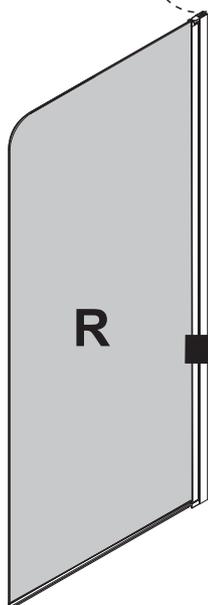
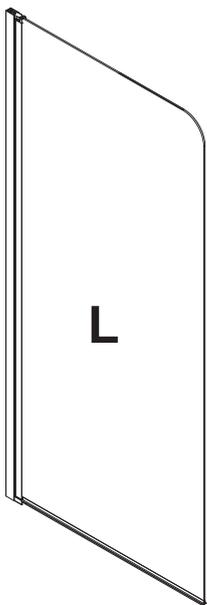


Keep the longer lip inside for water proofing


↑ INSIDE

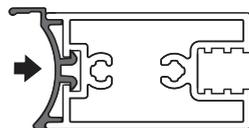

↓ OUTSIDE

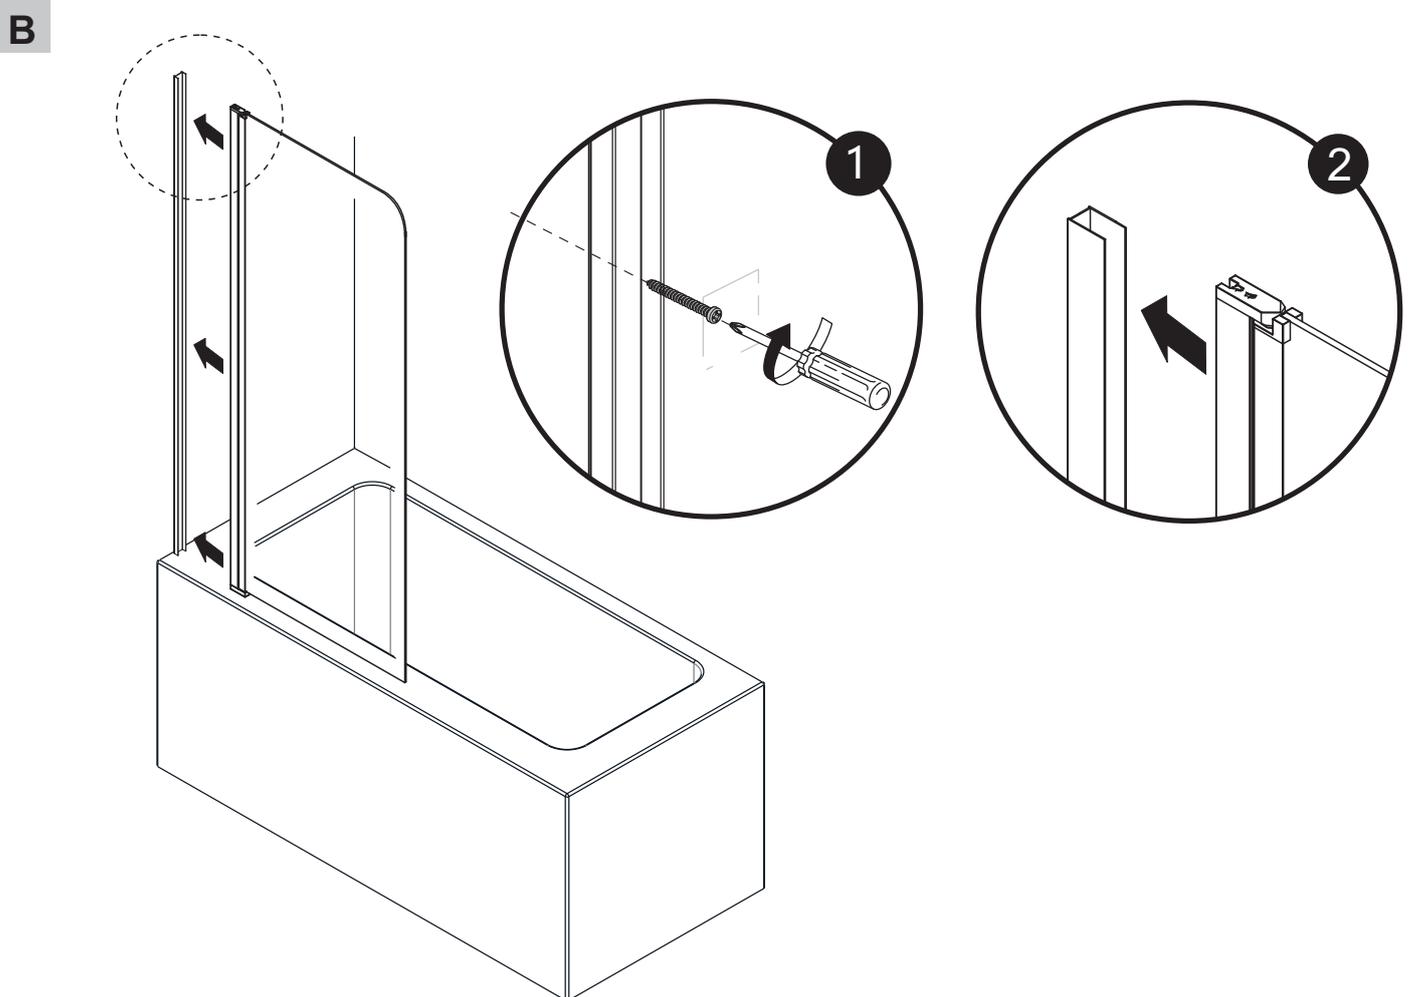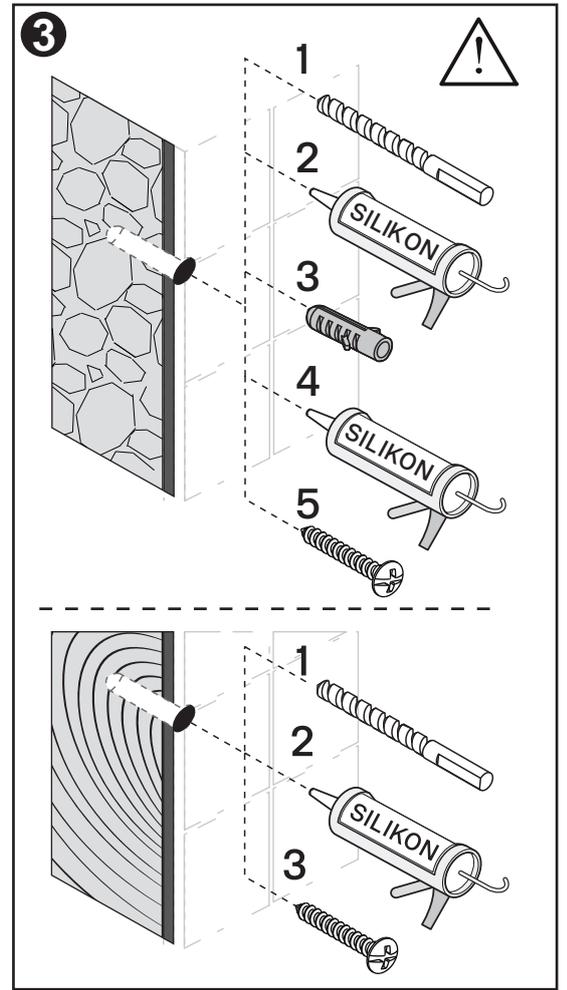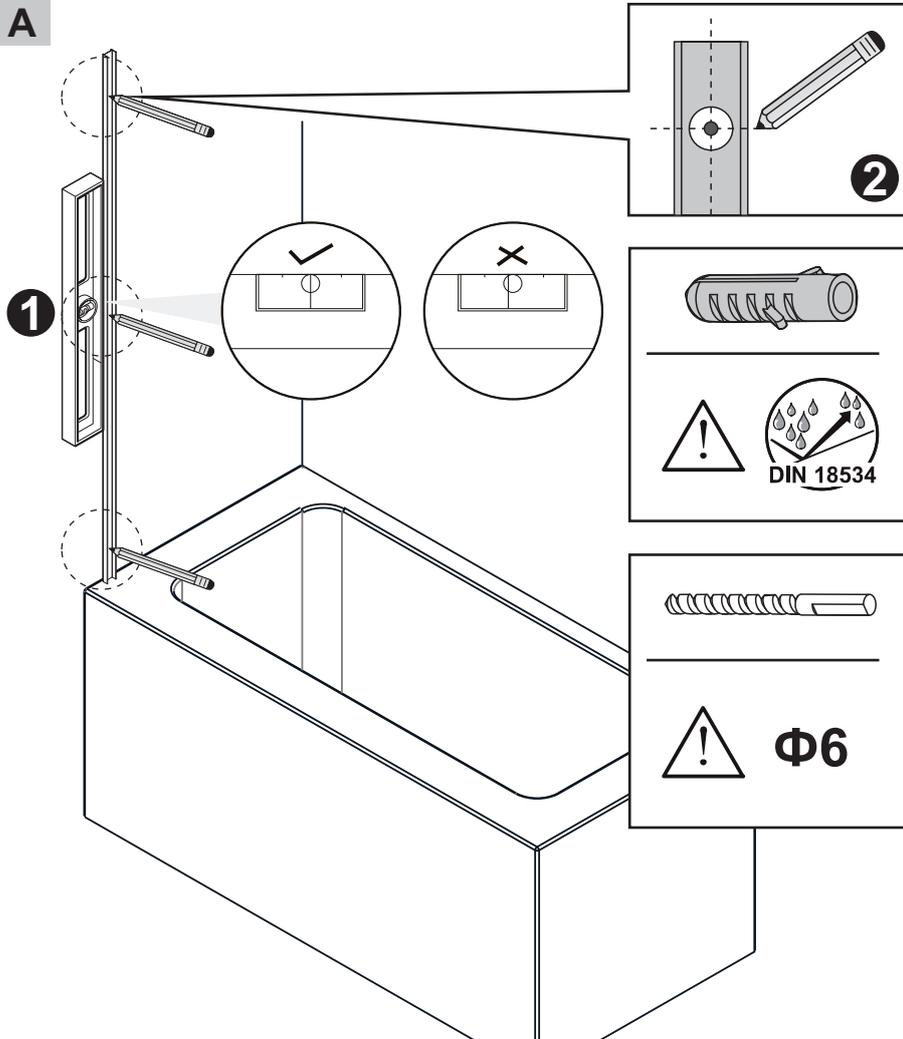

C

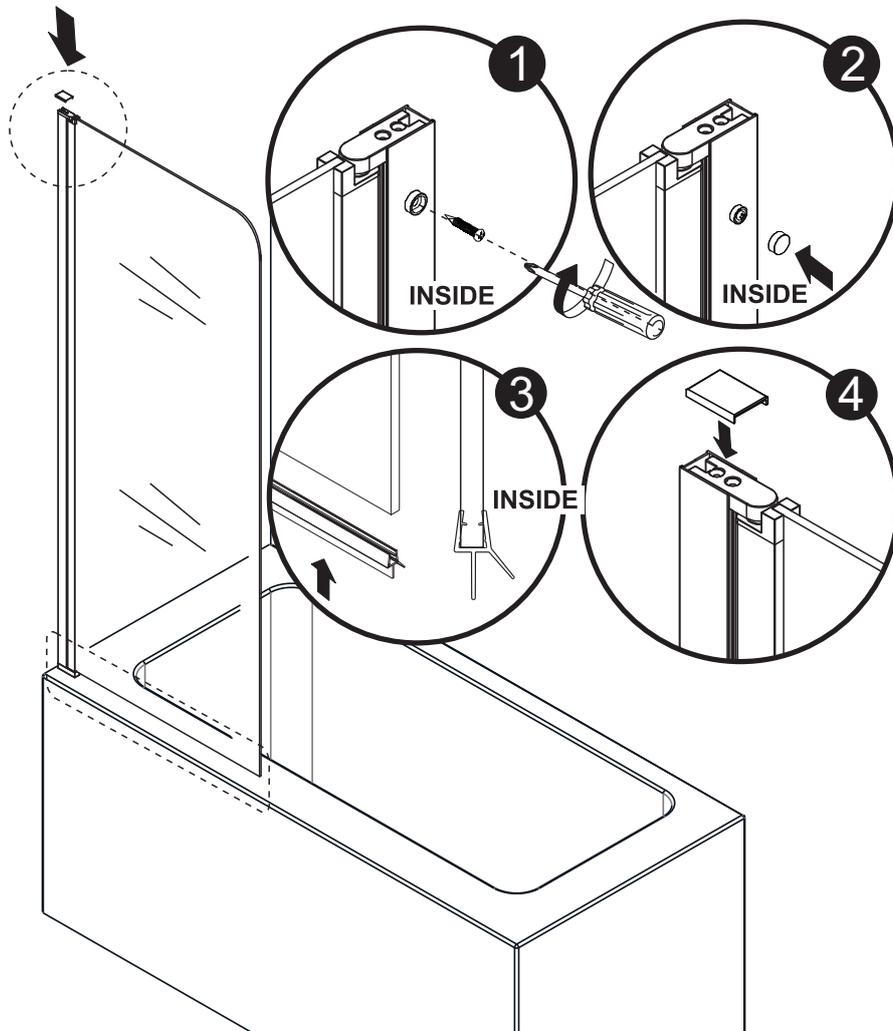

D

