


montážní návod / installation instruction

FA900/FA1200/FB900/FB1200

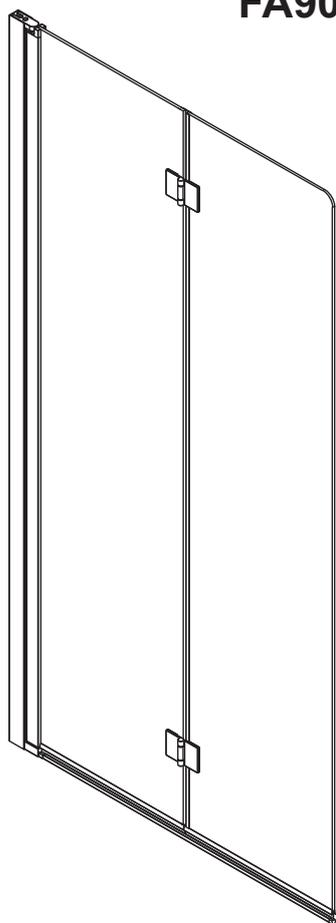

polysan 

Polysan s.r.o.





Nesměřice 52

285 22 Zruč nad Sázavou

Czech Republic

www.polysan.cz

1x

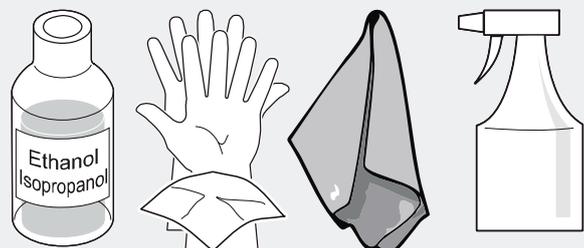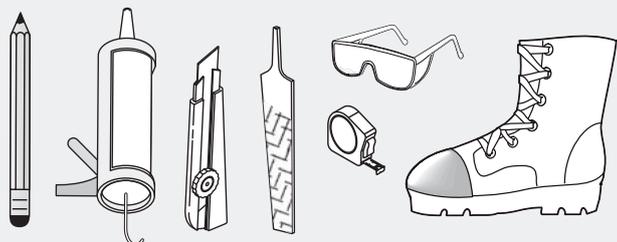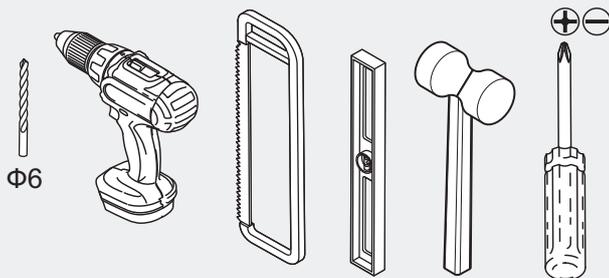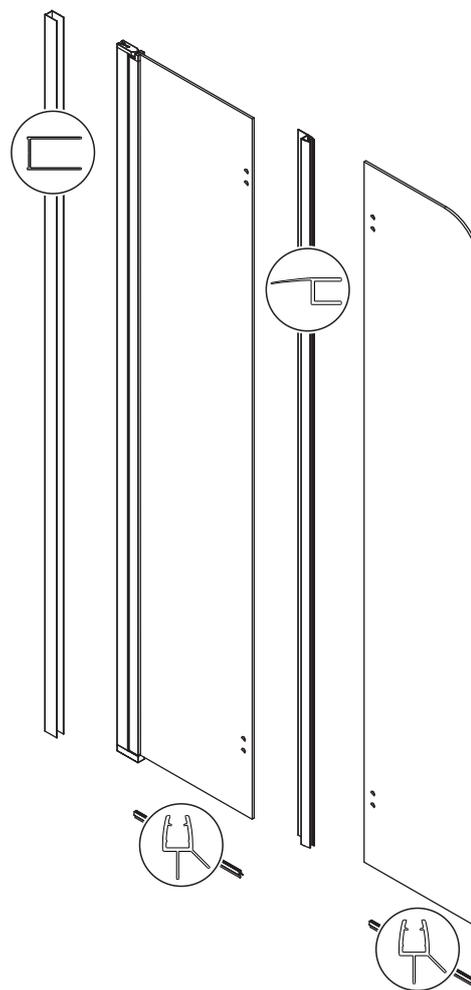


3x



Φ6 ST4x40

1x




3x






ST4X13

2x

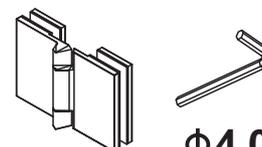

Φ4.0

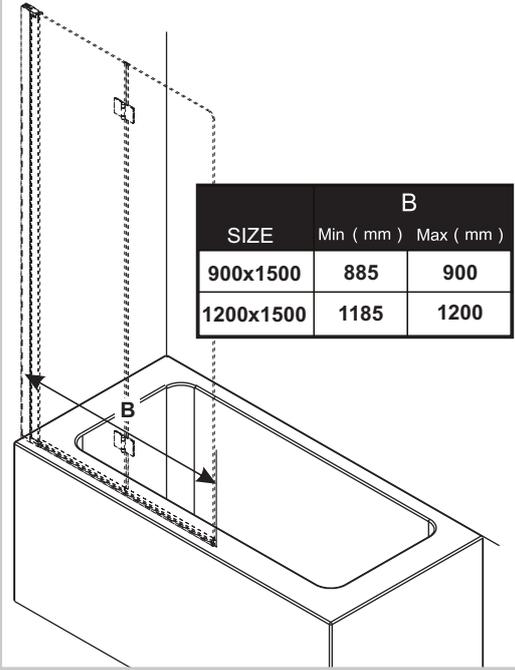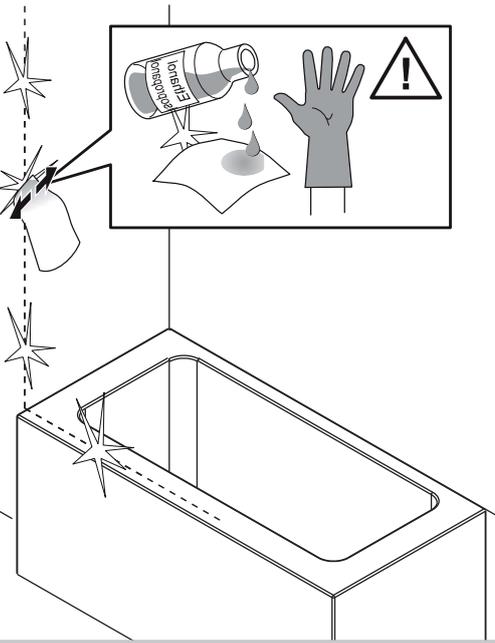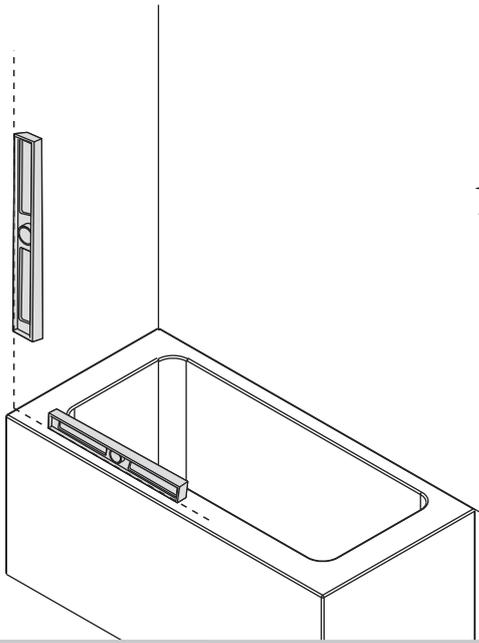






SIZE	B	
	Min (mm)	Max (mm)
900x1500	885	900
1200x1500	1185	1200

L

R


ATTENTION

Upside down the vertical gasket for R door opening

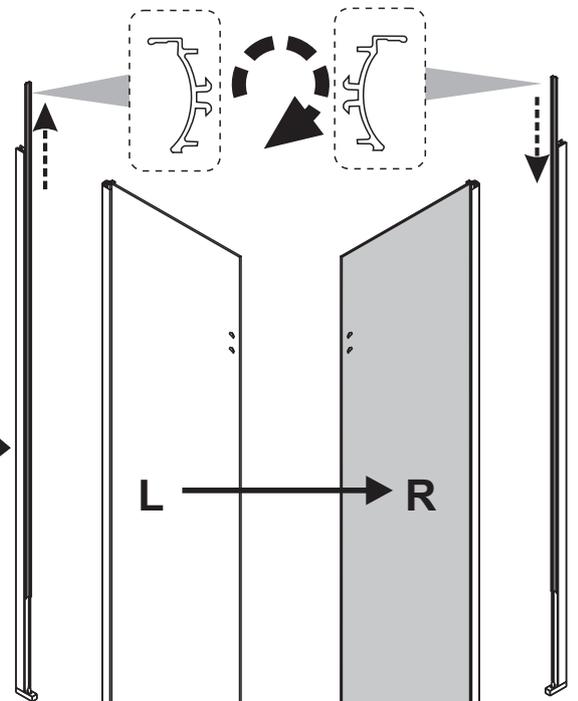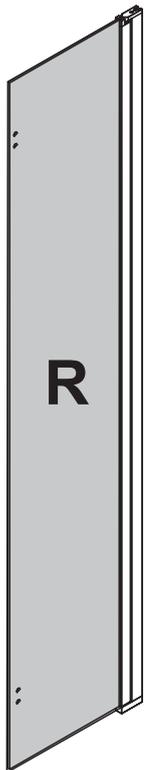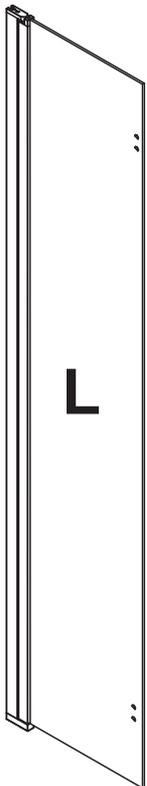
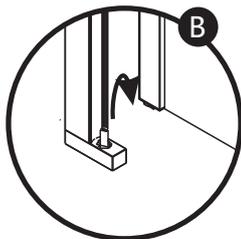
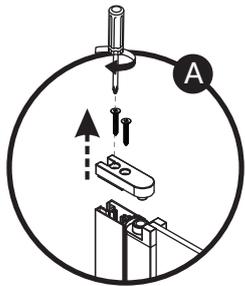


Keep the longer lip inside for water proofing


↑ INSIDE

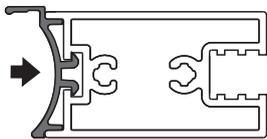

↓ OUTSIDE

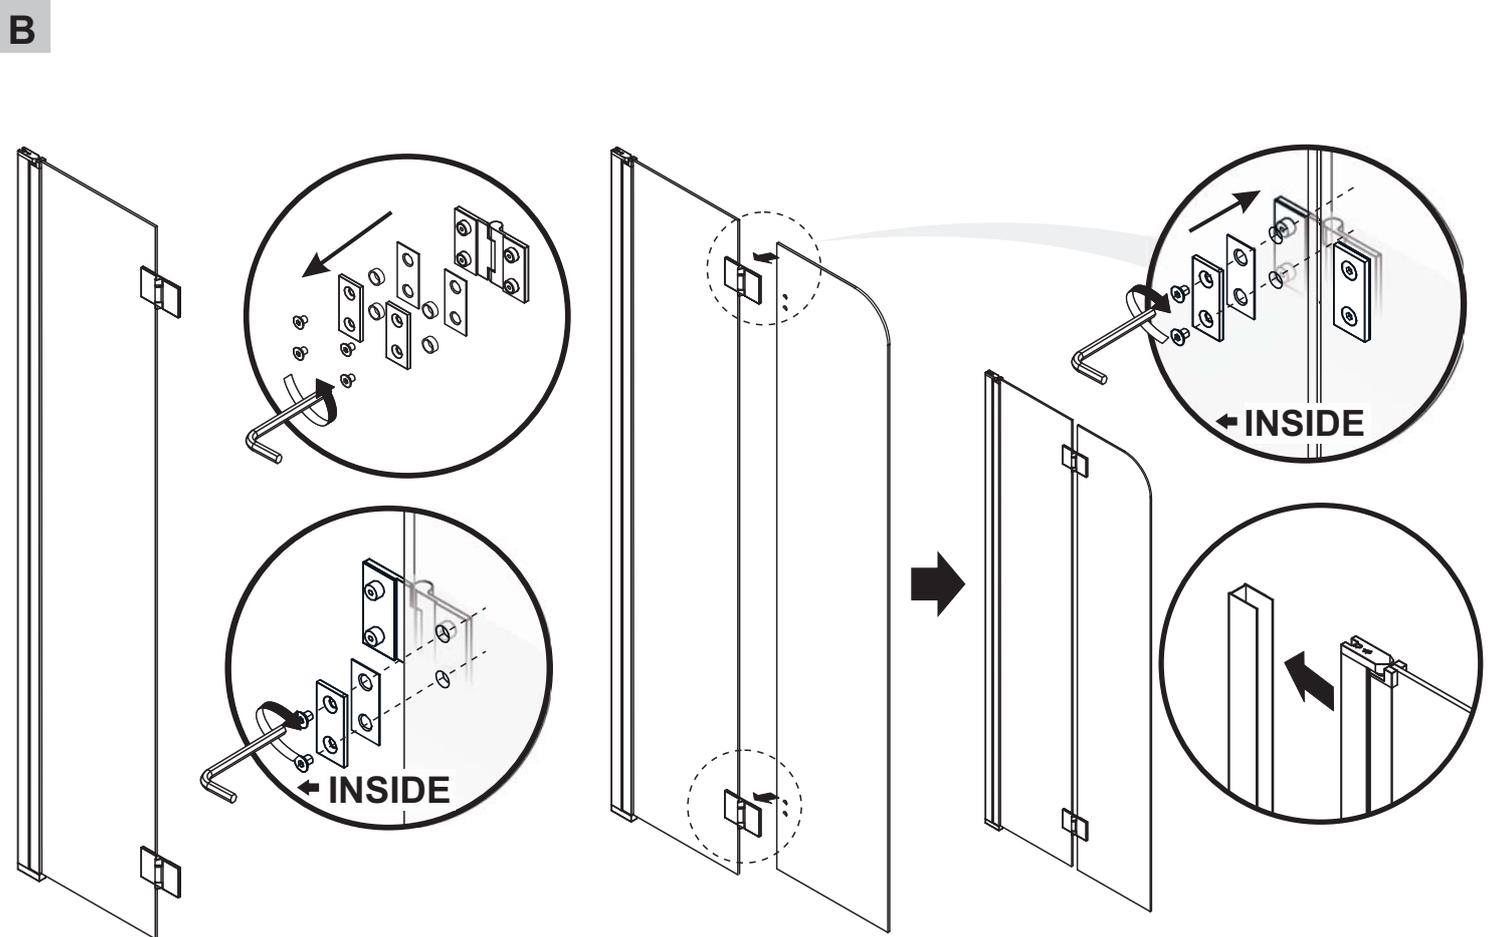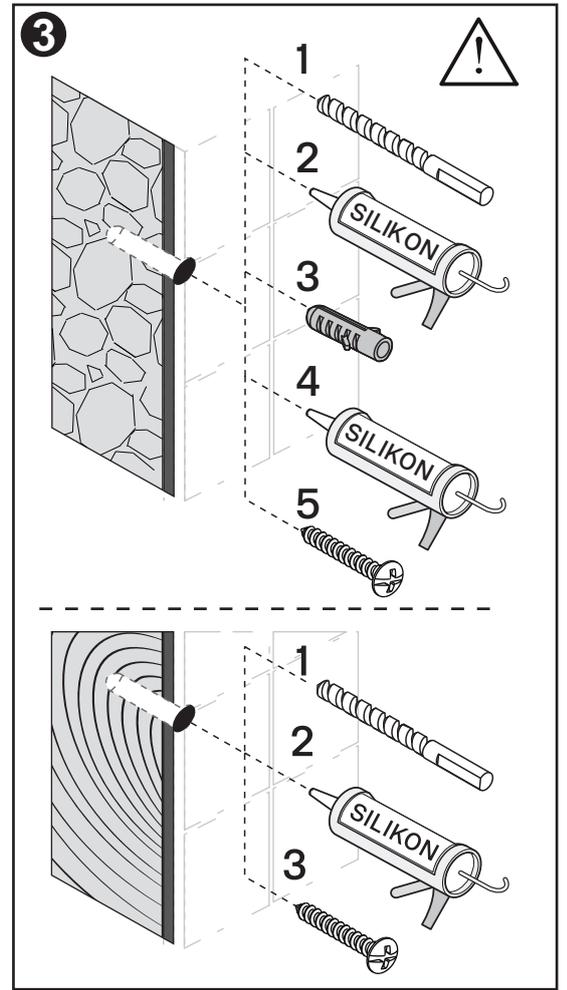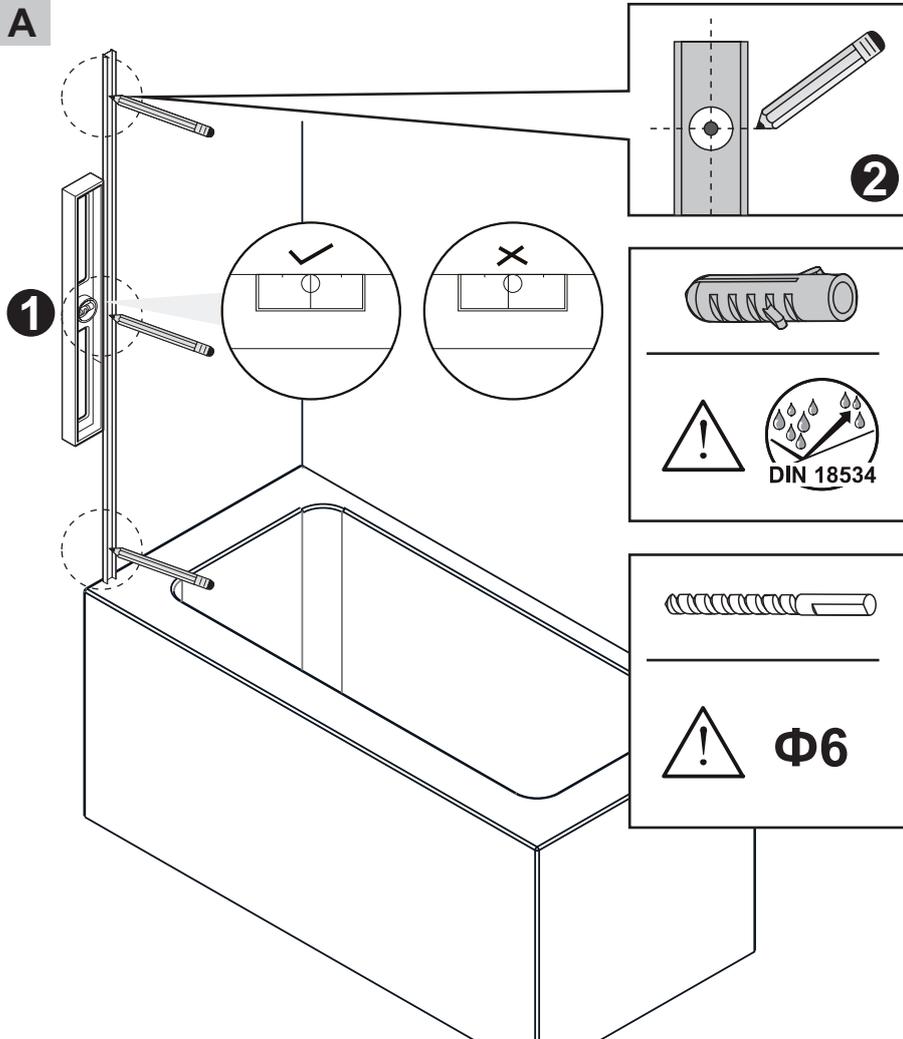

C

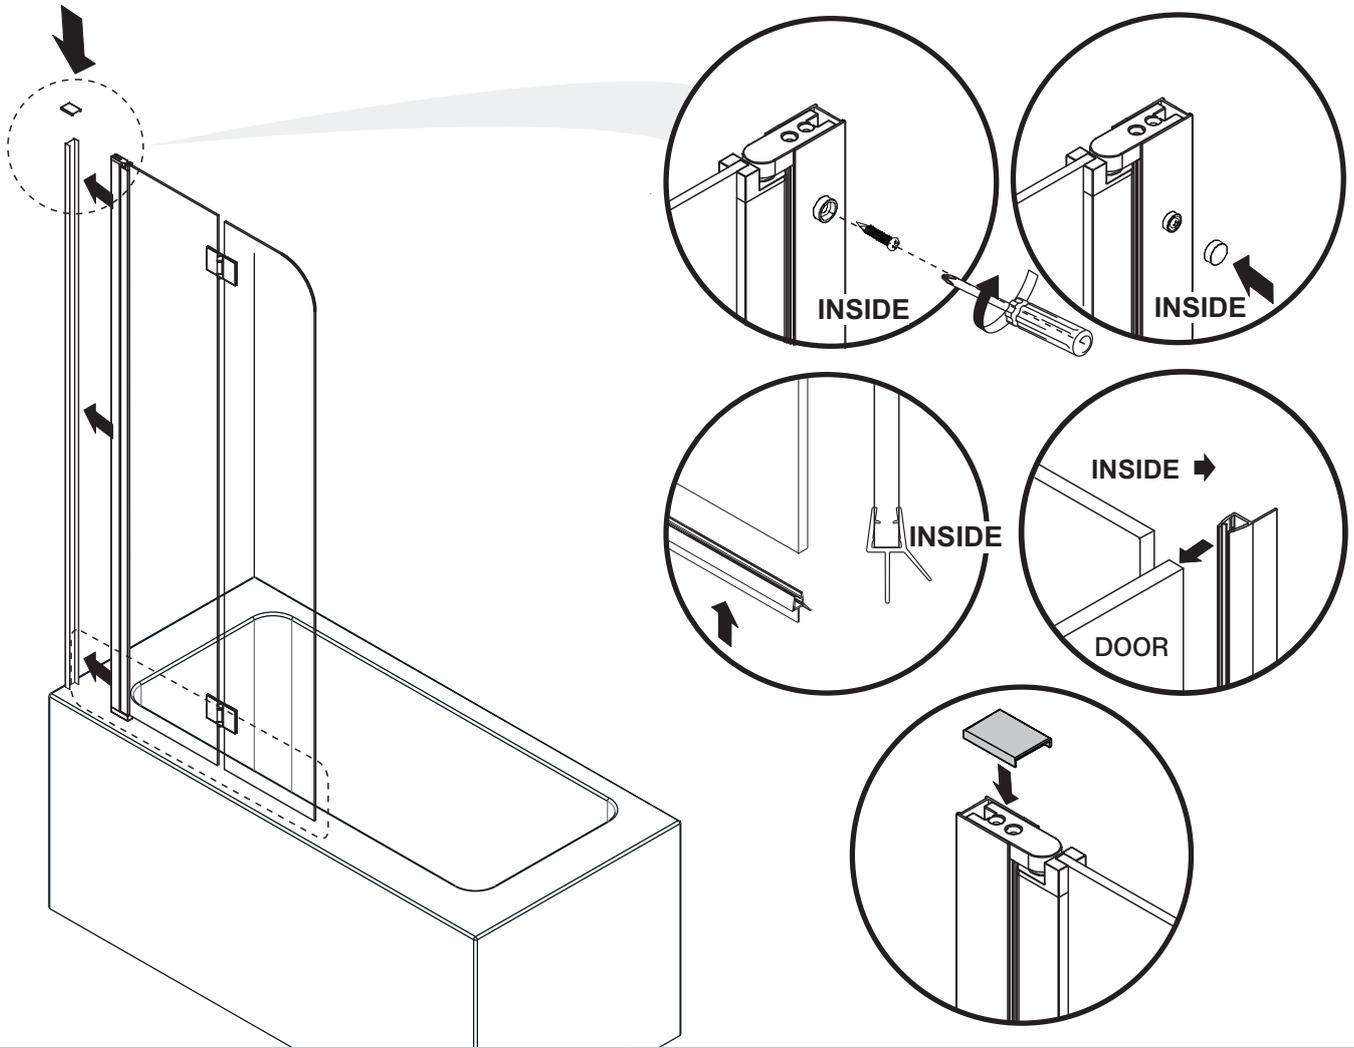

D

