


Installation instructions

NIX – SHOWER POCKET
WALL CLADDING INSTALLATION

polysan 

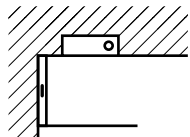

72441 – 60 cm
72442 – 80 cm
72443 – 100 cm

