

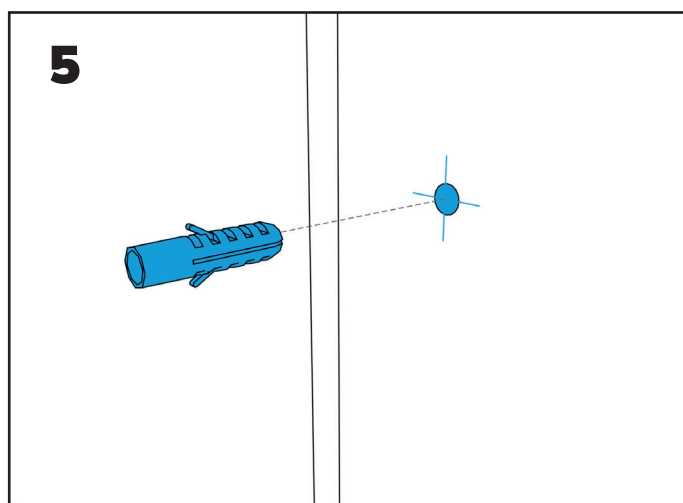
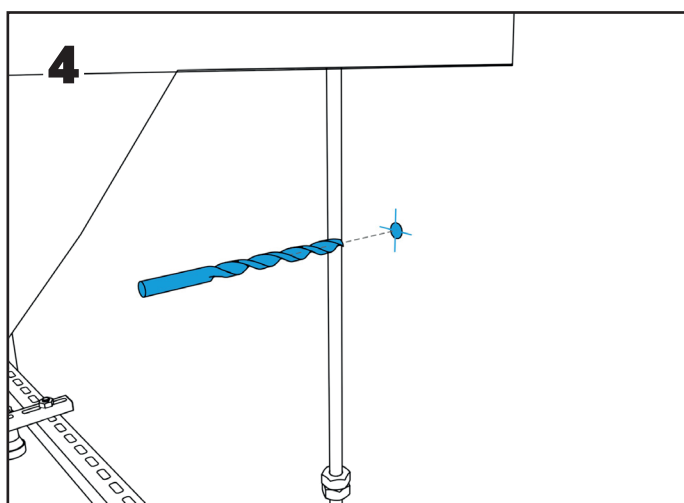
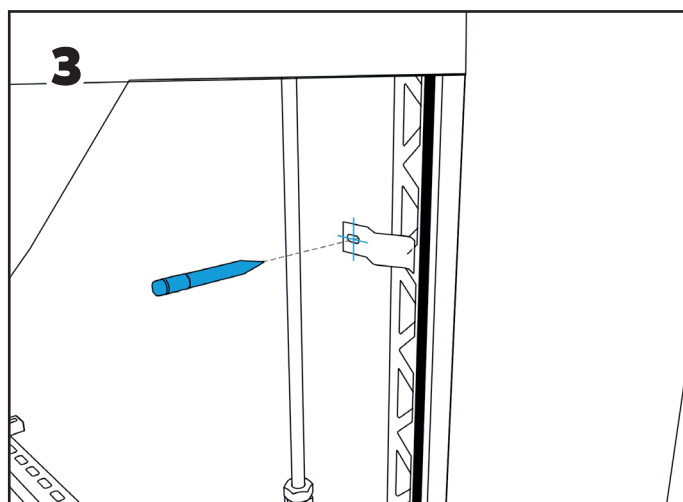
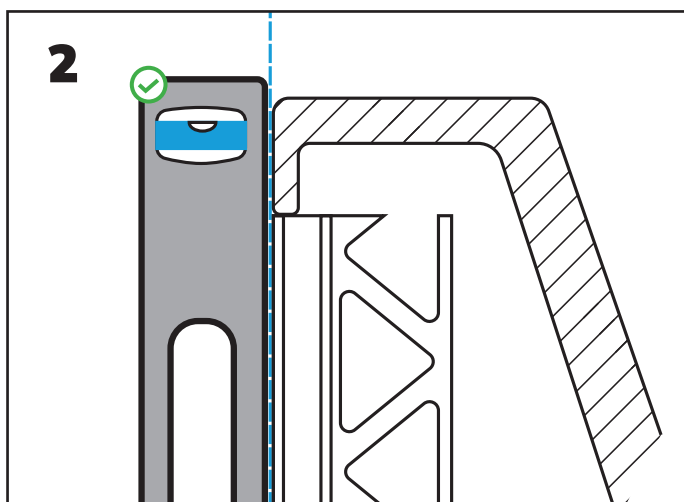
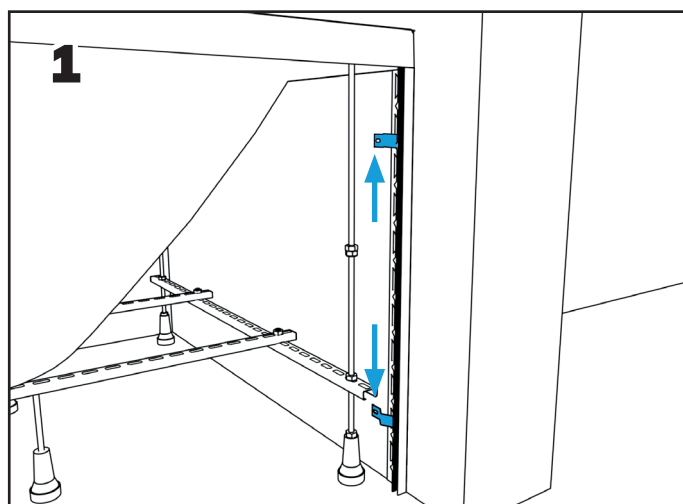
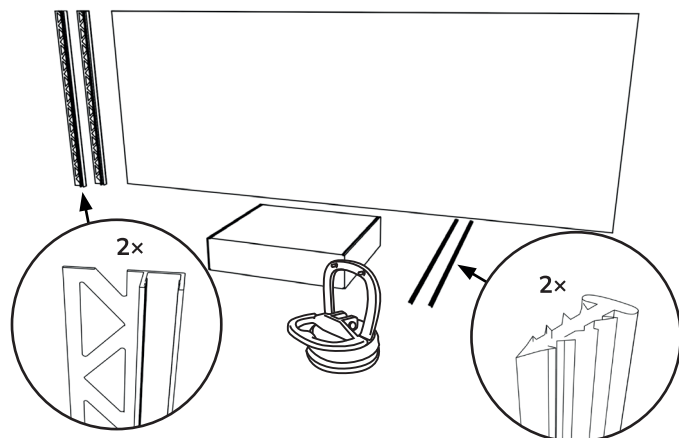
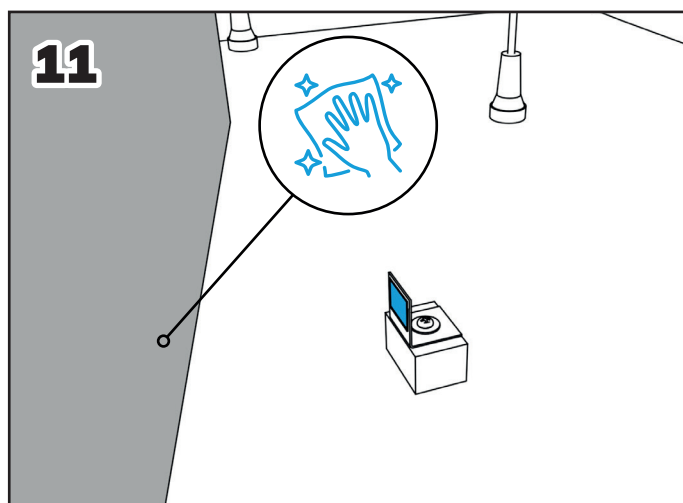
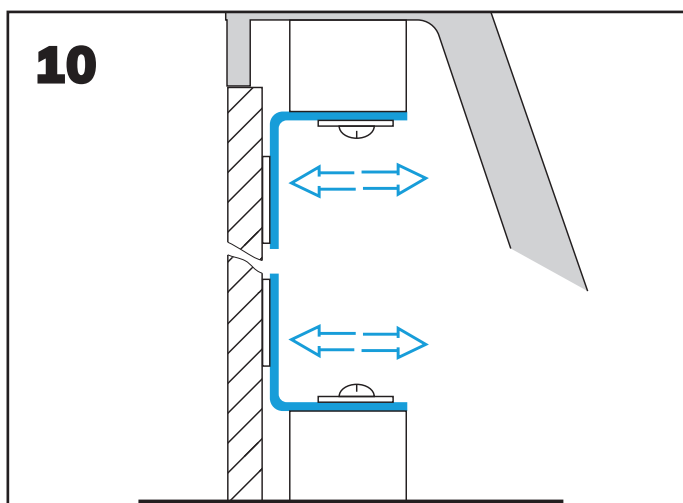
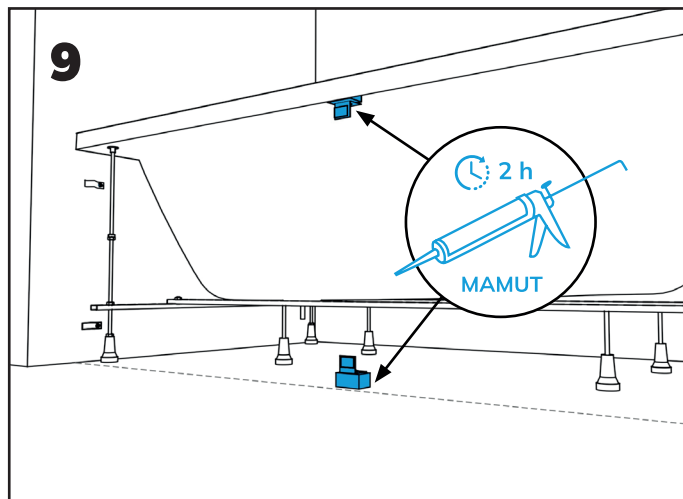
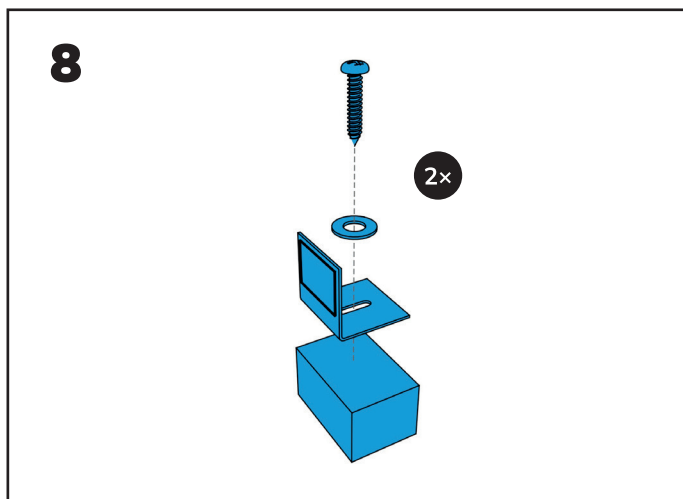


Installation instructions


UNIVERSAL cover panels
NICHE INSTALLATION

polysan 

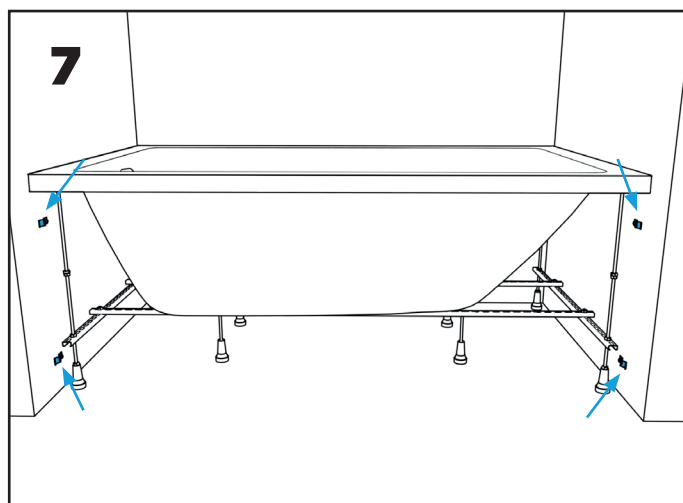


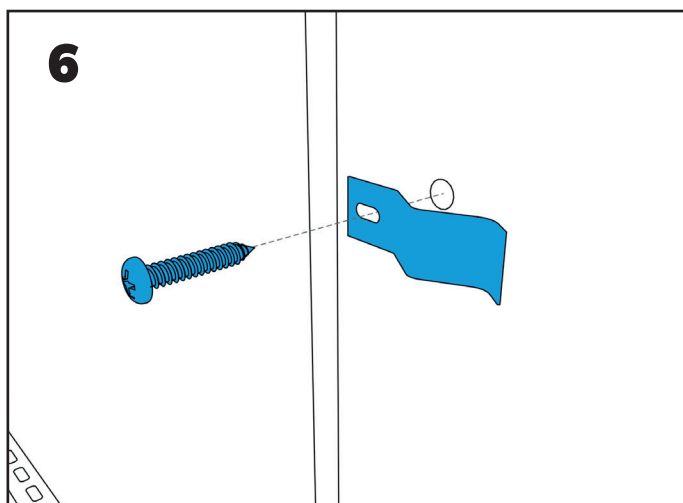


12

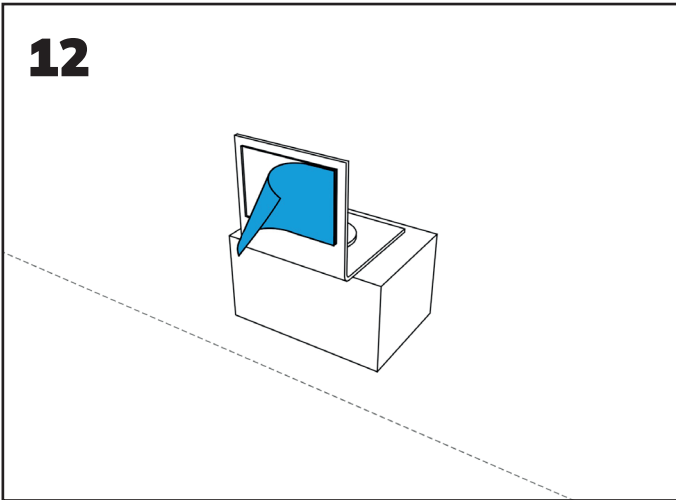


13

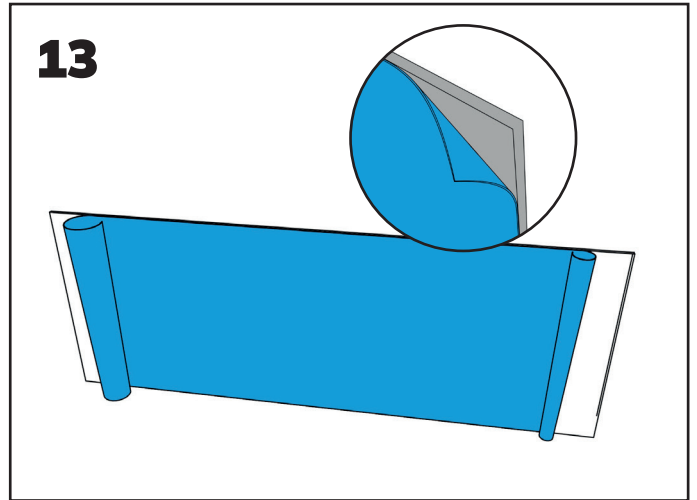


14

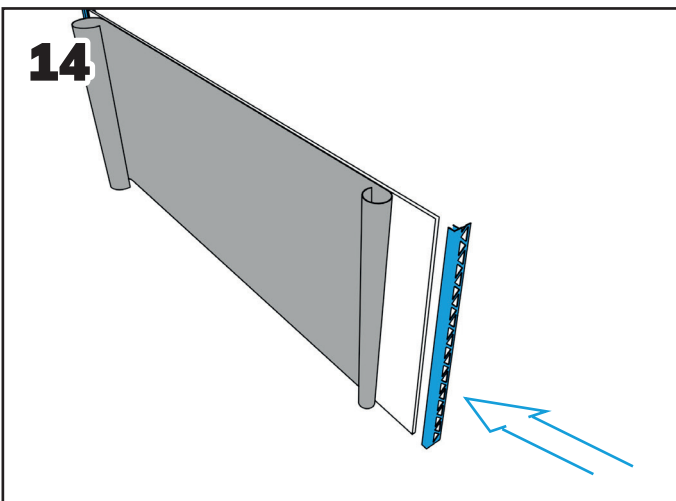

15

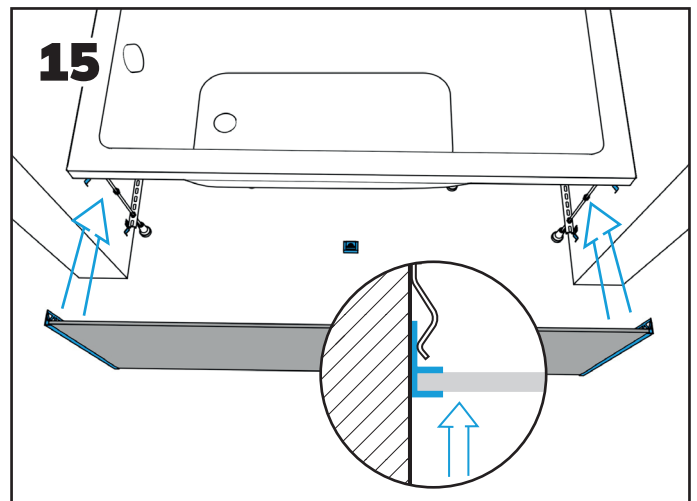

16

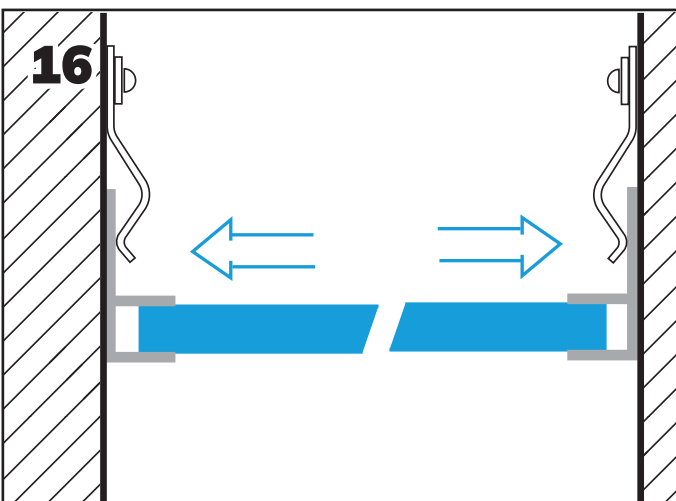

17

